

Installation manual

Washer extractor

**EUD-615CV, EUD-618CV, EUD-625CV, EUD-630CV,
EUD-645CV, EUD-660CV, EUD-680CV**

Type W3....



Electrolux
PROFESSIONAL

WARNING: ALL OPERATING AND MAINTENANCE PROCEDURES SHOWN ON THE NEXT PAGE OF THIS MANUAL MUST BE FOLLOWED DAILY FOR PROPER OPERATION OF YOUR MACHINE.

MAKE CERTAIN TO KEEP THIS MANUAL IN A SECURE PLACE FOR FUTURE REFERENCE.

PLEASE ENTER THE FOLLOWING INFORMATION AS IT APPEARS ON THE MACHINE(S) DATA PLATE(S).

MACHINE TYPE OR MODEL	
MACHINE SERIAL NUMBER(S)	
ELECTRICAL CHARACTERISTICS: _____ VOLTS, _____ PHASE, _____ HZ.	

IMPORTANT SAFETY INSTRUCTIONS

WARNING -

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, including the following:

1. Read all instructions before using the appliance.
2. This machine must be securely bolted to an uncovered concrete floor.
3. This machine **MUST** be serviced and operated in compliance with manufacturers instructions.
CHECK DOOR LOCKS EVERY DAY FOR PROPER OPERATION TO PREVENT INJURY OR DAMAGE. IF THE DOOR LOCK FAILS TO OPERATE PROPERLY, PLACE THE MACHINE OUT OF ORDER UNTIL THE PROBLEM IS CORRECTED.
4. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, drycleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
5. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
6. Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
7. Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
8. Before the appliance is removed from service or discarded, remove the door.
9. Do not reach into the appliance if the tub is moving.
10. Do not install or store this appliance where it will be exposed to the weather.
11. Do not tamper with controls.
12. Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
13. Changing of fuses inside the washing machine may only be carried out by authorized personnel.
14. This machine **MUST** be connected to a dedicated electrical circuit to which no other lighting unit or general purpose receptacle is connected. Use copper conductor only.

NOTICE TO: OWNERS, OPERATORS AND DEALERS

IMPROPER INSTALLATION AND INADEQUATE MAINTENANCE, POOR HOUSEKEEPING AND WILLFUL NEGLIGENCE OR BYPASSING OF SAFETY DEVICES MAY RESULT IN SERIOUS ACCIDENTS OR INJURY. TO ASSURE THE SAFETY OF CUSTOMERS AND/OR OPERATORS OF YOUR MACHINE, THE FOLLOWING MAINTENANCE CHECKS MUST BE PERFORMED ON A DAILY BASIS.

1. **Prior to operation of the machine**, check to make certain that all operating instructions and warning signs are affixed to the machine and legible. Missing or illegible ones must be replaced immediately. Be sure you have spare signs and labels available at all times. These can be obtained from your dealer.
2. **Check the door safety interlock, as follows:**
 - a. OPEN THE DOOR of the machine and attempt to start in the normal manner:
For coin-operated models, insert the proper coins to start the machine.
For manually operated models, place the ON-OFF switch in the ON position and press the Start switch.

THE MACHINE(S) MUST NOT START !

- b. CLOSE THE DOOR to start machine operation and, while it is operating, attempt to open the door without exerting extreme force on the door handle. The door should remain locked!
If the machine can start with the door open, or can continue to operate with the door unlocked, the door interlock is no longer operating properly. The machine **must** be placed **out of order** and the interlock immediately replaced.
3. DO NOT UNDER ANY CIRCUMSTANCES ATTEMPT TO BYPASS OR REWIRE ANY OF THE MACHINE SAFETY DEVICES AS THIS CAN RESULT IN SERIOUS ACCIDENTS.
4. **Be sure to keep the machine(s) in proper working order:** Follow **all** maintenance and safety procedures. Further information regarding machine safety, service and parts can be obtained from your dealer.
All requests for assistance must include the model, serial number and electrical characteristics as they appear on the machine identification plate. Insert this information in the space provided on the previous page of this manual.
5. **WARNING:** DO NOT OPERATE MACHINE(S) WITH SAFETY DEVICES BYPASSED, REWIRED OR INOPERATIVE! DO NOT OPEN MACHINE DOOR UNTIL DRUM HAS STOPPED ROTATING!

NOTICE TO INSTALLER

Improper installation of this machine:

- May cause serious damage to the machine.
- May result in other property damage.
- May cause personal injury.
- Will void the manufacturer's warranty.

Improper fastening of this machine to its foundation, inferior foundation materials, an undersized foundation, the use of fabricated steel bases not provided by Electrolux Professional or its approved supplier(s), the use of an improper type, number, or size of mounting bolts, or failure to use proper hardware on mounting bolts may result in damage to the machine that will not be covered by the manufacturer's warranty.

Connection to line Voltage or over-current protection devices other than those specified on the data plate may result in severe damage to machine components, and will void the manufacturer's warranty.

Refer to complete installation instructions provided in manuals accompanying the machine.

Contact Electrolux Professional Technical Support with any questions BEFORE installing this machine. Damage resulting from inadequate installation materials or improper installation techniques will void the manufacturer's warranty.

Contents

Contents

1	Safety Precautions	9
1.1	General safety information.....	9
1.2	Commercial use only.....	9
1.3	Copyright	10
1.4	Ergonomics certification	10
1.5	Symbols.....	10
2	Warranty terms and exclusions.....	11
3	Technical data.....	12
3.1	Drawing	12
3.1.1	EUD-615CV, EUD-618CV, EUD-625CV	12
3.1.2	EUD-630CV.....	13
3.1.3	EUD-645CV, EUD-660CV, EUD-680CV	14
3.2	Technical data	15
3.3	Connections	15
4	Setup	16
4.1	Unpacking.....	16
4.1.1	EUD-615, EUD-618, EUD-625.....	16
4.1.2	EUD-630, EUD-645, EUD-660, EUD-680	18
4.2	Recycling instruction for packaging	20
4.3	Siting	21
4.4	Mechanical installation	21
5	Water connection	23
6	Connection of external dosing systems	24
6.1	Jetsave and Dosave.....	24
6.1.1	Connection of the tube.....	24
7	Drain connection	25
8	Electrical connection.....	26
8.1	Electrical installation	26
8.2	Electrical connections	26
8.3	Machine connection with ferrite.....	29
8.3.1	EUD-630CV, EUD-645CV, EUD-660CV, EUD-680CV	29
8.4	Machine connection	30
8.5	Connector with termination resistor	30
8.6	Connection of external functions	31
8.6.1	Outputs	31
8.6.2	Inputs.....	32
8.7	Functions for I/O-boards.....	33
8.7.1	Enable start (22A, 22B).....	33
8.7.2	Remote start/stop (22A, 22B).....	34
8.7.3	External coin meter/Central payment (22A, 22B).....	35
8.7.4	Pause (22A, 22B).....	36
8.7.5	Dual heating (22A, 22B).....	37
8.7.6	Trigger signals for dosing system without saving (22B).....	38
8.7.7	Dual heating and Trigger signals for dosing system without saving (22B).....	39
8.8	Converting heating elements	40
8.8.1	EUD-615, EUD-618 and EUD-625 can be converted from 400-415V 3AC to 230-240V 1AC with reduced power	40
8.8.2	EUD-630 can be converted from 380-415V 3N AC to 220-240V 1N AC with reduced power	41
9	Steam connection	42
10	Steam connection for dual heating (option for EUD-630, EUD-645, EUD-660, EUD-680).....	44
11	Machine with level tube and test tap (option for EUD-630, EUD-645, EUD-660, EUD-680).....	47
11.1	Setup/Using	47
12	At first power up	48
13	Function check.....	49
14	Disposal information.....	50
14.1	Disposal of appliance at end of life	50
14.2	Disposal of packing.....	50

Contents

The manufacturer reserves the right to make changes to design and component specifications.

1 Safety Precautions

- Servicing shall be carried out only by authorized personnel.
- Only authorized spare parts, accessories and consumables shall be used.
- Only use detergent intended for water-wash of textiles. Never use dry cleaning agents.
- The machine shall be connected with new water hoses. Re-used water hoses must not be used.
- The machine's door lock must under no circumstances be bypassed.
- If the machine develops a fault, this must be reported to the person in charge as soon as possible. This is important both for your safety and that of others.
- DO NOT MODIFY THIS APPLIANCE.
- When performing service or replacing parts, the power must be disconnected.
- When the power is disconnected, the operator must see that the machine is disconnected (that the plug is removed and remains removed) from any point to which he has access. If this is not possible, due to the construction or installation of the machine, a disconnection with a locking system in the isolated position shall be provided.
- In accordance with the wiring rules: mount a multi-pole switch prior to the machine to facilitate installation and service operations.
- If different rated voltages or different rated frequencies (separated by a /) are stated at the machine data plate, instructions for adjusting the appliance for operation at the required rated voltage or rated frequency are stated in the installation manual.
- Stationary appliances not fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III, means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- The openings in the base, shall not be obstructed by a carpet.
- Maximum mass of dry cloth: EUD-615CV: 7.5 kg / 16.5 lbs, EUD-618CV: 8.5 kg / 18.7 lbs, EUD-625CV: 11.5 kg / 25.4 lbs, EUD-630CV: 14.5 kg / 32 lbs, EUD-645CV: 21 kg / 46.3 lbs, EUD-660CV: 27.5 kg / 60.6 lbs, EUD-680CV: 36.5 kg / 80.5 lbs.
- A-weighted emission sound pressure level at working stations:
 - Wash: EUD-615CV: <70 dB(A), EUD-618CV: <70 dB(A), EUD-625CV: <70 dB(A), EUD-630CV: <70 dB(A), EUD-645CV: <70 dB(A), EUD-660CV: <70 dB(A), EUD-680CV: <70 dB(A).
 - Extraction: EUD-615CV: <70 dB(A), EUD-618CV: <70 dB(A), EUD-625CV: <70 dB(A), EUD-630CV: <70 dB(A), EUD-645CV: <70 dB(A), EUD-660CV: <70 dB(A), EUD-680CV: <70 dB(A).
- Maximum inlet water pressure: 1000 kPa / 145 psi
- Minimum inlet water pressure: 50 kPa / 8 psi

1.1 General safety information

The machine is only intended for water-wash use.

Do not hose down the machine with water.

In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.

1.2 Commercial use only

The machine/machines covered by this manual is/are made for commercial and industrial use only.

1.3 Copyright

This manual is intended solely for consultation by the operator and can only be given to third parties with the permission of Electrolux Professional AB company.

1.4 Ergonomics certification

The human body is designed for movement and activity but physical stress injuries as a result of static and repetitive movements or unfavorable working postures may occur.

The ergonomic features of your product, the ones which may influence your physical and cognitive interaction with it, have been assessed and certified.

A product which exhibits ergonomic features, in fact, shall fulfil specific ergonomic requirements, belonging to three different areas: Polytechnic, Biomedical and Psychosocial (usability and satisfaction).

For each of these areas, specific tests with real users have been performed. The product was therefore compliant with the ergonomic acceptability criteria requested by the standards.

In case several machines are managed by the same operator the repetitive movements will increase and as a consequence of this the related biomechanical risk will increase exponentially.

Follow the below recommendations to avoid, as much as possible, operators acquiring bodily injury.

- The models EUD-630, EUD-645, EUD-660 and EUD-680 should be connected to automatic dosing of chemicals or equipped with detergent dosing dispenser on the front.
- For the models EUD-615, EUD-618 and EUD-625 the possible postural risks are the interaction with the door handle in case the machine is not placed on a base. Place the machine on a base instead of directly on the floor so that the operator does not need to bend his/her back unnecessarily when loading and unloading.
Minimum suggested height of bases is 300 mm / 11 13/16 inch.
- The hand force needed to open and close the washing machine door can be perceived too high the first times the machine is used due to the initial high gasket pressure. Therefore, it is recommended not to use only the fingers but also the palm when closing and opening the door. The gasket pressure will be lower after some days of use.
- Make sure there are suitable trolleys or baskets for loading, unloading and transportation.
- Organize job rotation in the working place in the case several machines are managed by the same operator.

1.5 Symbols

	Caution
	Caution, high voltage
	Read the instructions before using the machine

2 Warranty terms and exclusions

If the purchase of this product includes warranty coverage, warranty is provided in line with local regulations and subject to the product being installed and used for the purposes as designed, and as described within the appropriate equipment documentation.

Warranty will be applicable where the customer has used only genuine spare parts and has performed maintenance in accordance with Electrolux Professional AB user and maintenance documentation made available in paper or electronic format.

Electrolux Professional AB strongly recommends using Electrolux Professional AB approved cleaning, rinse and descaling agents to obtain optimal results and maintain product efficiency over time.

The Electrolux Professional AB warranty does not cover:

- service trips cost to deliver and pick up the product;
- installation;
- training on how to use/operate;
- replacement (and/or supply) of wear and tear parts unless resulting from defects in materials or workmanship reported within one (1) week from the failure;
- correction of external wiring;
- correction of unauthorized repairs as well as any damages, failures and inefficiencies caused by and/or resulting from;
 - insufficient and/or abnormal capacity of the electrical systems (current/voltage/frequency, including spikes and/or outages);
 - inadequate or interrupted water supply, steam, air, gas (including impurities and/or other that does not comply with the technical requirements for each appliance);
 - plumbing parts, components or consumable cleaning products that are not approved by the manufacturer;
 - customer's negligence, misuse, abuse and/or non-compliance with the use and care instructions detailed within the appropriate equipment documentation;
 - improper or poor: installation, repair, maintenance (including tampering, modifications and repairs carried out by third parties not authorized third parties) and modification of safety systems;
 - Use of non-original components (e.g.: consumables, wear and tear, or spare parts);
 - environment conditions provoking thermal (e.g. overheating/freezing) or chemical (e.g. corrosion/oxidation) stress;
 - foreign objects placed in- or connected to- the product;
 - accidents or force majeure;
 - transportation and handling, including scratches, dents, chips, and/or other damage to the finish of the product, unless such damage results from defects in materials or workmanship and is reported within one (1) week of delivery unless otherwise agreed;
- product with original serial numbers that have been removed, altered or cannot be readily determined;
- replacement of light bulbs, filters or any consumable parts;
- any accessories and software not approved or specified by Electrolux Professional AB.

Warranty does not include scheduled maintenance activities (including the parts required for it) or the supply of cleaning agents unless specifically covered within any local agreement, subject to local terms and conditions.

Check on Electrolux Professional AB website the list of authorized customer care.

3 Technical data

3.1 Drawing

3.1.1 EUD-615CV, EUD-618CV, EUD-625CV

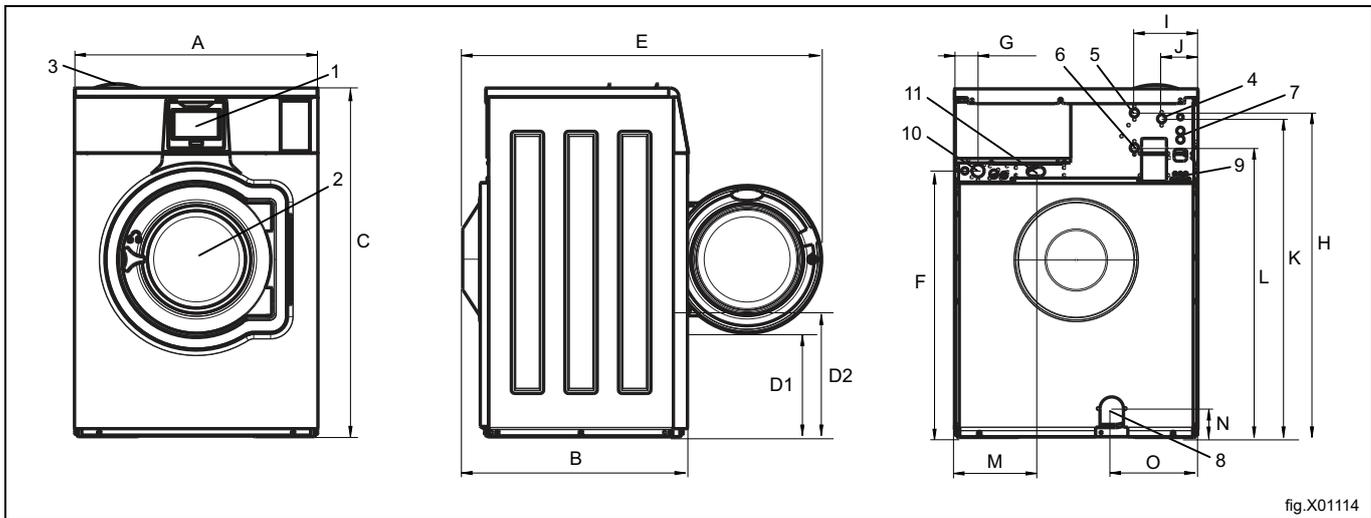


fig.X01114

1	Display
2	Door opening, EUD-615CV, EUD-618CV: \varnothing 310 mm / 12 3/16 inch, EUD-625: \varnothing 365 mm / 14 3/8 inch
3	Detergent container
4	Cold water
5	Hot water
6	Cold/Hot water or Re-used water with network pressure (option)
7	Re-used water from tank/pump or Liquid detergent supply
8	Drain
9	Liquid detergent supply
10	Electrical connection
11	Steam connection

mm inch	A	B	C	D1	D2	E	F	G
EUD-615CV	720 28 3/8	720 28 3/8	1120 44 1/8	360 14 3/16	425 16 3/4	1135 44 11/16	835 32 7/8	80 3 1/8
EUD-618CV	720 28 3/8	720 28 3/8	1120 44 1/8	360 14 3/16	425 16 3/4	1135 44 11/16	835 32 7/8	80 3 1/8
EUD-625CV	830 32 11/16	770 30 5/16	1200 47 1/4	365 14 3/8	435 17 1/8	1240 48 13/16	920 36 1/4	80 3 1/8

mm inch	H	I	J	K	L	M	N	O
EUD-615CV	1035 40 3/4	215 8 7/16	125 4 15/16	1015 39 15/16	915 36	280 11	100 3 15/16	240 9 7/16
EUD-618CV	1035 40 3/4	215 8 7/16	125 4 15/16	1015 39 15/16	915 36	280 11	100 3 15/16	240 9 7/16
EUD-625CV	1120 44 1/8	215 8 7/16	125 4 15/16	1100 43 5/16	1000 39 3/8	280 11	105 4 1/8	295 11 5/8

3.1.2 EUD-630CV

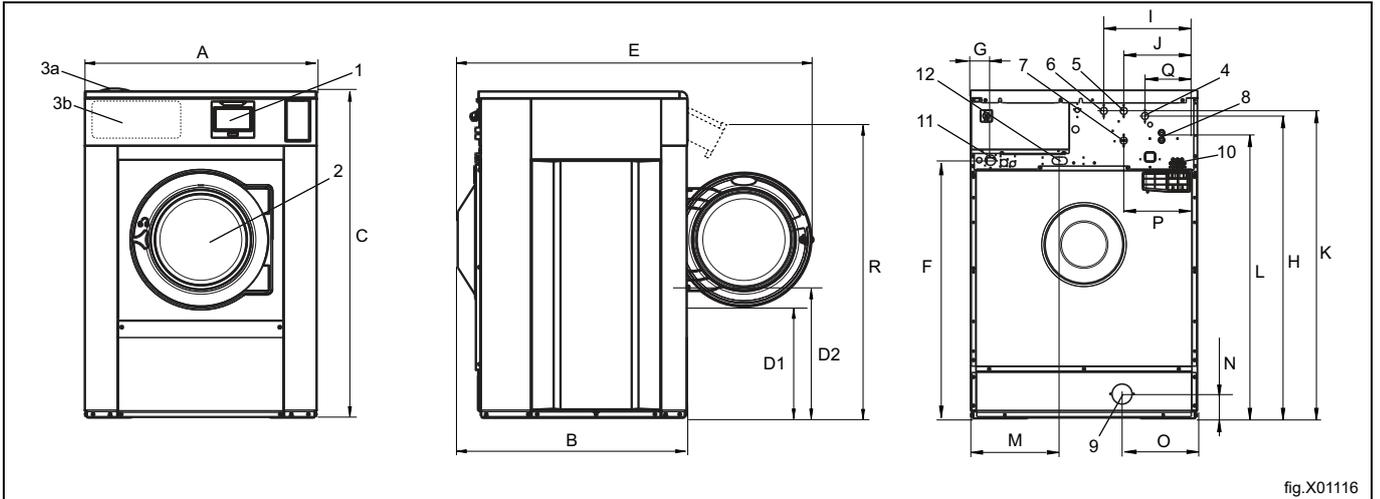


fig.X01116

1	Display
2	Door opening, EUD-630CV: \varnothing 395 mm / 15 9/16 inch
3a	Detergent container
3b	Detergent container (option)
4	Cold/Hot water (Detergent container)
5	Cold water
6	Hot water
7	Cold/Hot water or Re-used water with network pressure (option)
8	Re-used water from tank/pump or Liquid detergent supply
9	Drain
10	Liquid detergent supply
11	Electrical connection
12	Steam connection

mm inch	A	B	C	D1	D2	E	F	G
EUD-630CV	910 35 13/16	820 32 5/16	1330 52 3/8	440 17 5/16	515 20 1/4	1310 51 9/16	1050 41 5/16	80 3 1/8

mm inch	H	I	J	K	L	M	N	O
EUD-630CV	1245 49	375 14 3/4	295 11 5/8	1225 48 1/4	1125 44 5/16	360 14 3/16	105 4 1/8	305 12

mm inch	P	Q	R
EUD-630CV	295 11 5/8	210 8 1/4	1215 47 13/16

3.1.3 EUD-645CV, EUD-660CV, EUD-680CV

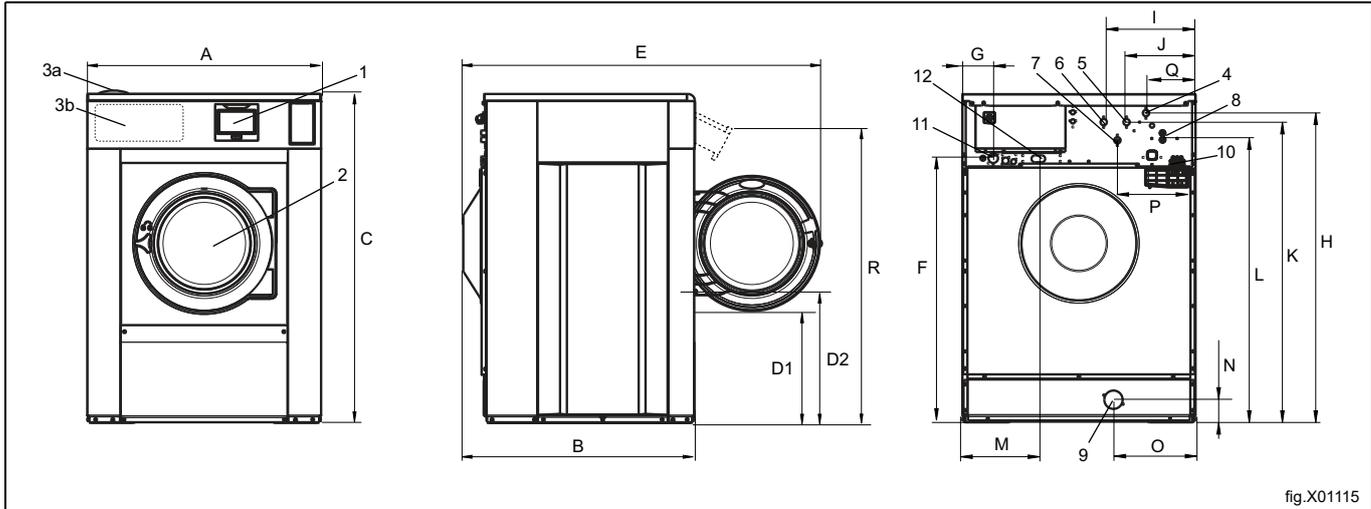


fig.X01115

1	Display
2	Door opening, EUD-645CV, EUD-660CV, EUD-680CV: \varnothing 435 mm / 17 1/8 inch
3a	Detergent container
3b	Detergent container (option)
4	Cold/Hot water (Detergent container)
5	Cold water
6	Hot water
7	Cold/Hot water or Re-used water with network pressure (option)
8	Re-used water from tank/pump or Liquid detergent supply
9	Drain
10	Liquid detergent supply
11	Electrical connection
12	Steam connection

mm inch	A	B	C	D1	D2	E	F	G
EUD-645CV	970 38 3/16	945 37 3/16	1415 55 11/16	470 18 1/2	555 21 7/8	1480 58 1/4	1135 44 11/16	150 5 7/8
EUD-660CV	1020 40 3/16	990 39	1450 57 1/16	500 19 11/16	580 22 13/16	1525 60 1/16	1170 46 1/16	135 5 5/16
EUD-680CV	1020 40 3/16	1135 44 11/16	1450 57 1/16	500 19 11/16	580 22 13/16	1665 65 9/16	1170 46 1/16	135 5 5/16

mm inch	H	I	J	K	L	M	N	O
EUD-645CV	1330 52 3/8	400 15 3/4	300 11 13/16	1290 50 13/16	1210 47 5/8	350 13 3/4	105 4 1/8	335 13 3/16
EUD-660CV	1365 53 3/4	400 15 3/4	300 11 13/16	1325 52 3/16	1245 49	335 13 3/16	105 4 1/8	360 14 3/16
EUD-680CV	1365 53 3/4	400 15 3/4	300 11 13/16	1325 52 3/16	1245 49	335 13 3/16	105 4 1/8	360 14 3/16

mm inch	P	Q	R
EUD-645CV	330 13	215 8 7/16	1300 51 3/16
EUD-660CV	340 13 3/8	215 8 7/16	1335 52 9/16
EUD-680CV	340 13 3/8	215 8 7/16	1335 52 9/16


4 Setup

4.1 Unpacking


4.1.1 EUD-615, EUD-618, EUD-625

Removal of the bolts between the machine and pallet

Remove the front and rear panel.

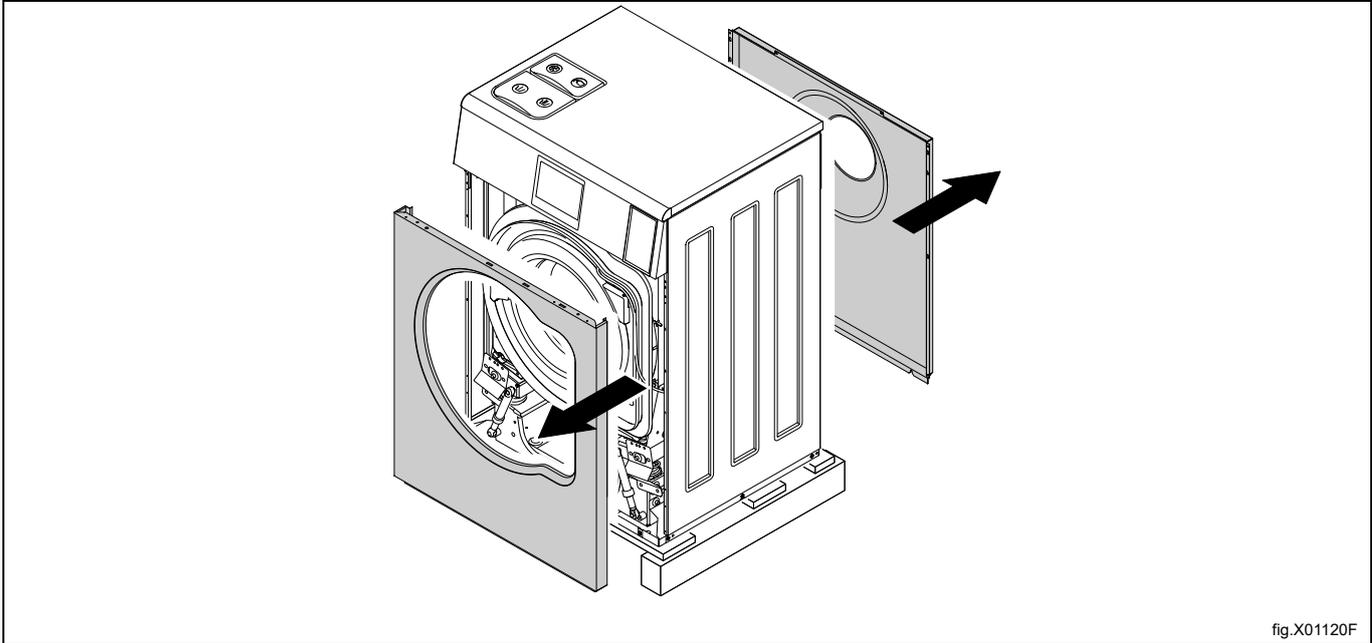

Remove the bolts between the machine and pallet.

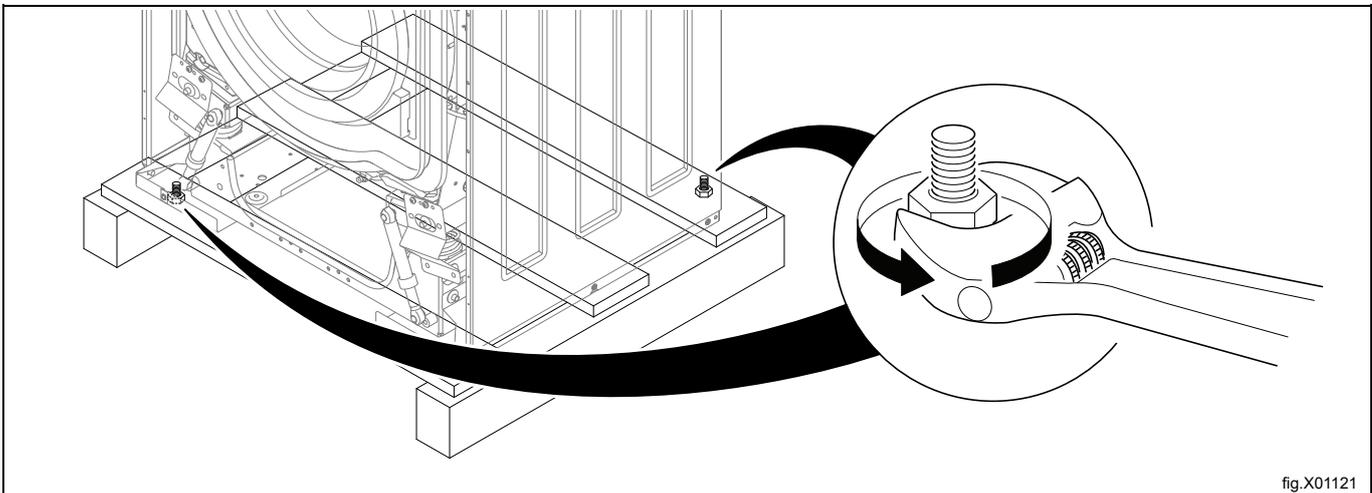

Remove the machine from the pallet.

Note!

When moving the machine, handle it with care. Make sure that the machine does not come down on the floor with either of the rear corners first. The side panel of the machine can be damaged.

Removal of the transport securities

When the machine is placed in final or close to final position, remove the four transport supports. Save the transport supports if the machine needs to be moved in the future.

Note!

Once the transport supports have been removed, handle the machine carefully to avoid damage to the suspension components.

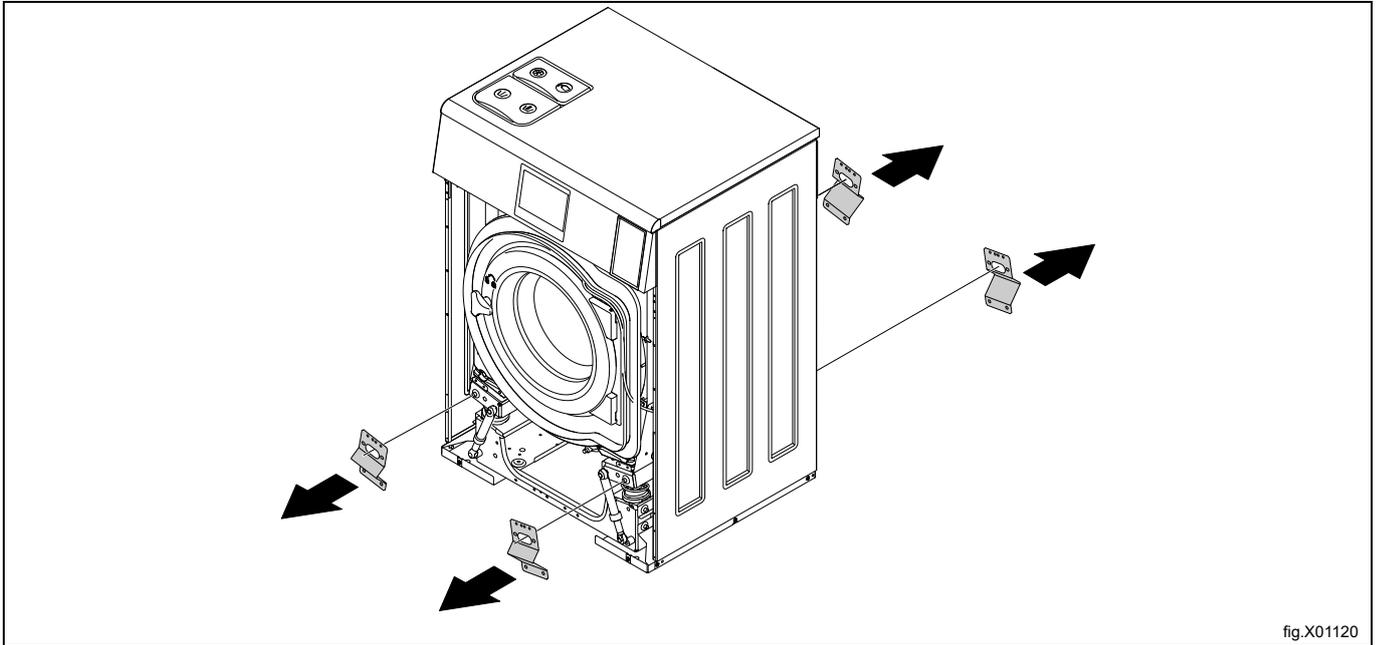


fig.X01120

When the machine is placed in final position, mount the supporting feet. (If the machine is not to be mounted on a base).

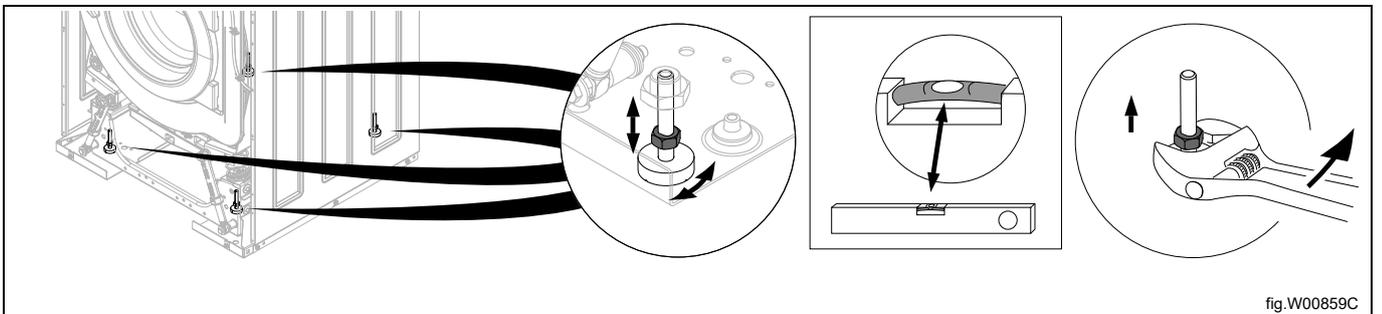


fig.W00859C

4.1.2 EUD-630, EUD-645, EUD-660, EUD-680


Removal of the bolts between the machine and pallet

Note!


Two persons are recommended for the unpacking.

Remove the side panels.

Remove the front and rear panel.

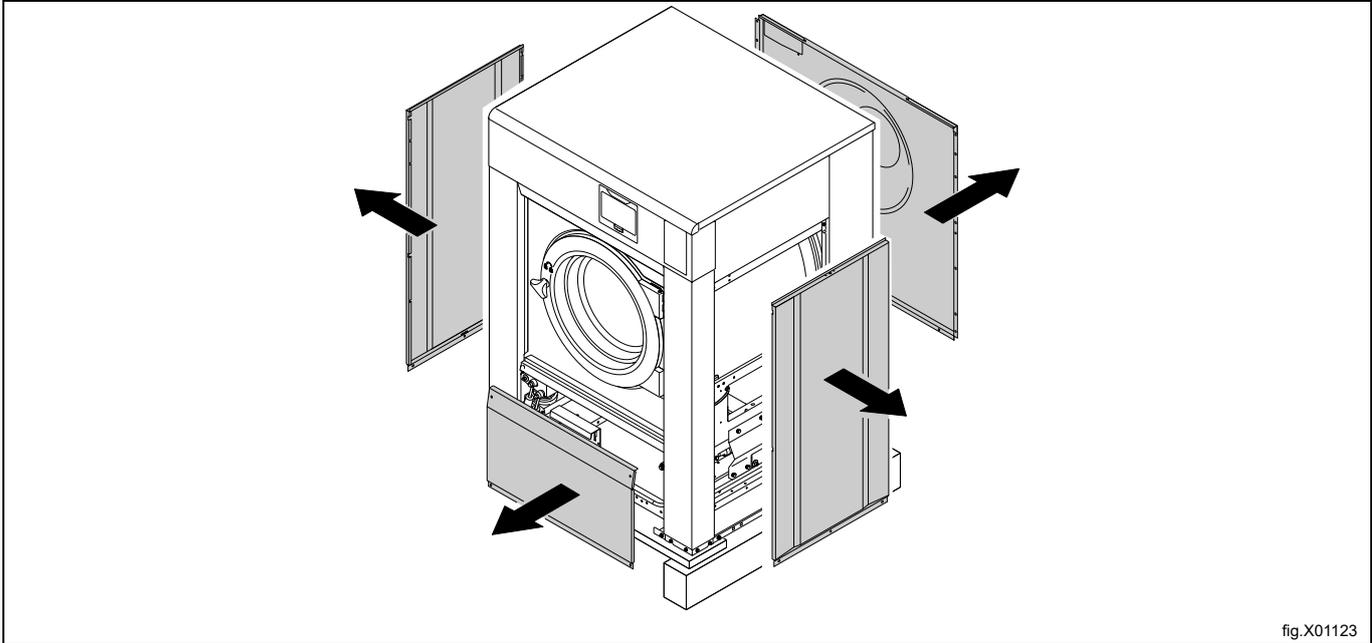

Remove the bolts between the machine and pallet.

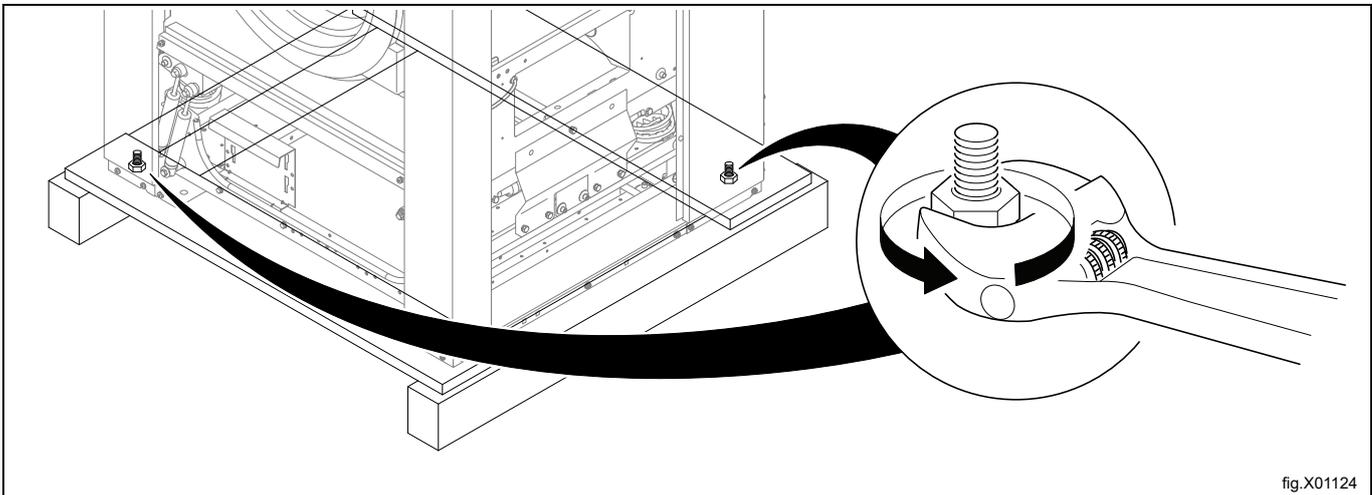


Remove the machine from the pallet.

Removal of the transport securities


When the machine is placed in final or close to final position, remove the four transport supports. Save the transport supports if the machine needs to be moved in the future.

Note!

Once the transport supports have been removed, handle the machine carefully to avoid damage to the suspension components.

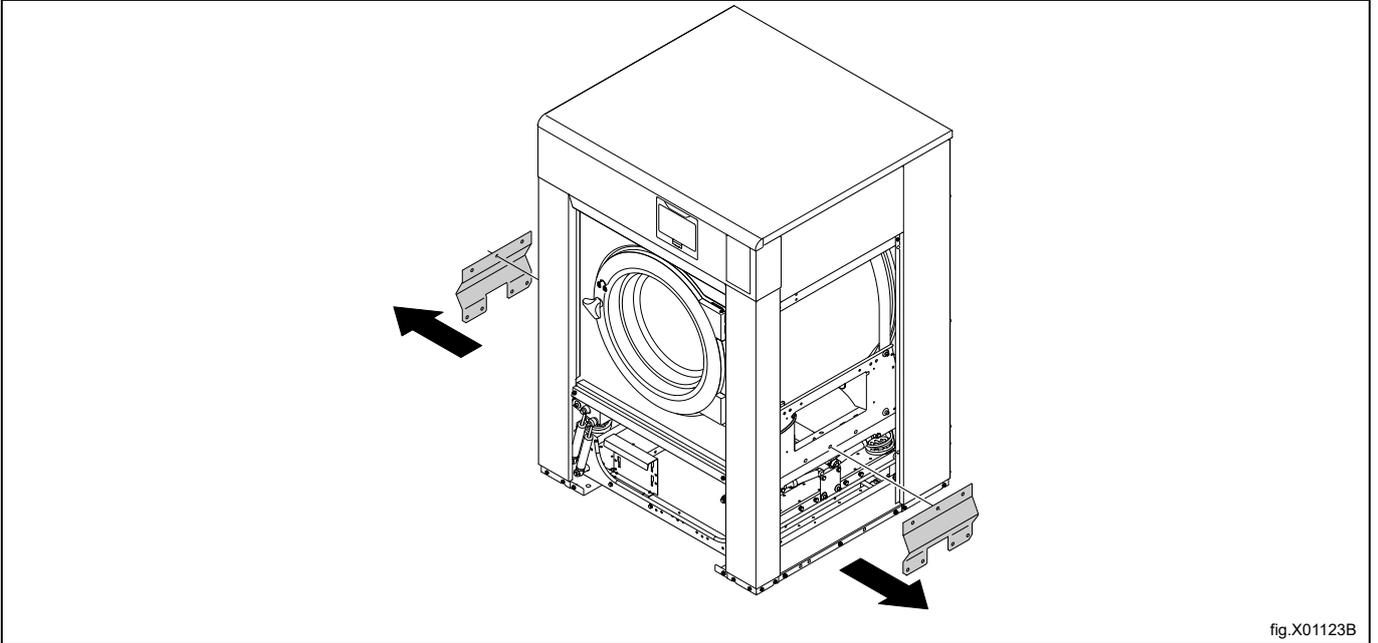

When the machine is placed in final position, mount the supporting feet. (If the machine is not to be mounted on a base).

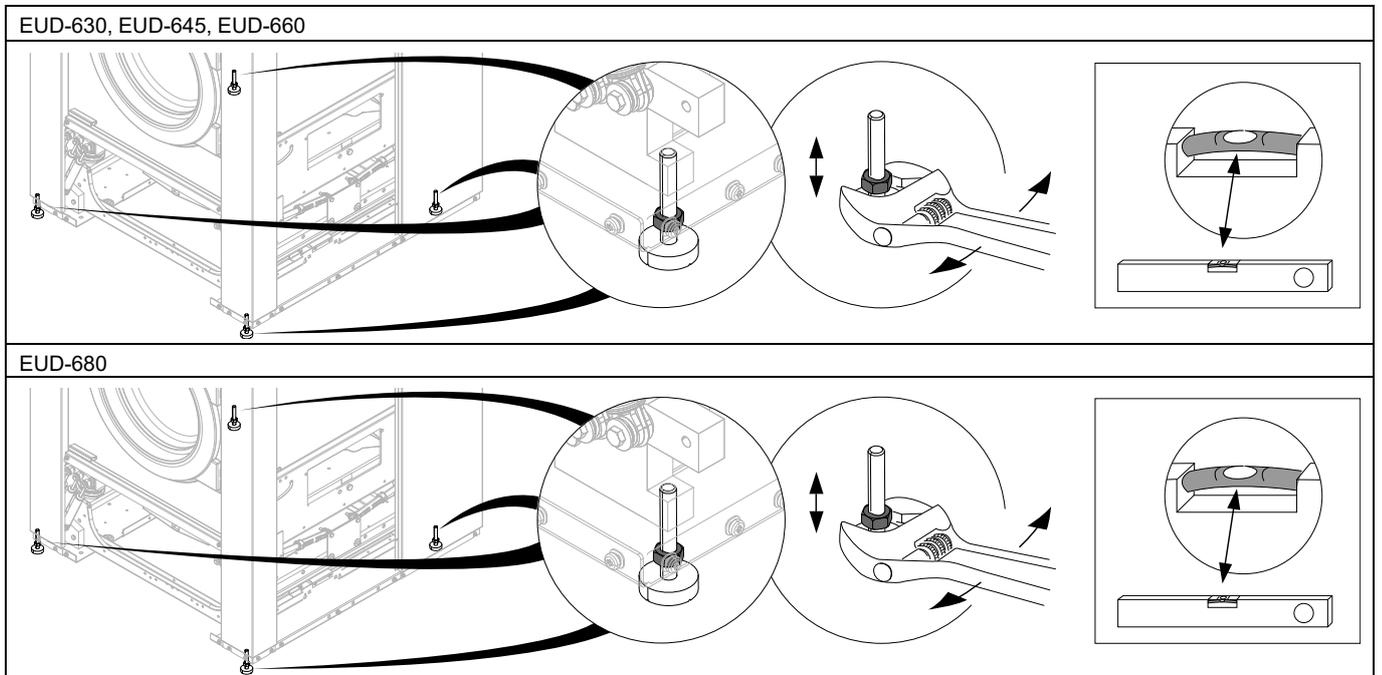

4.2 Recycling instruction for packaging

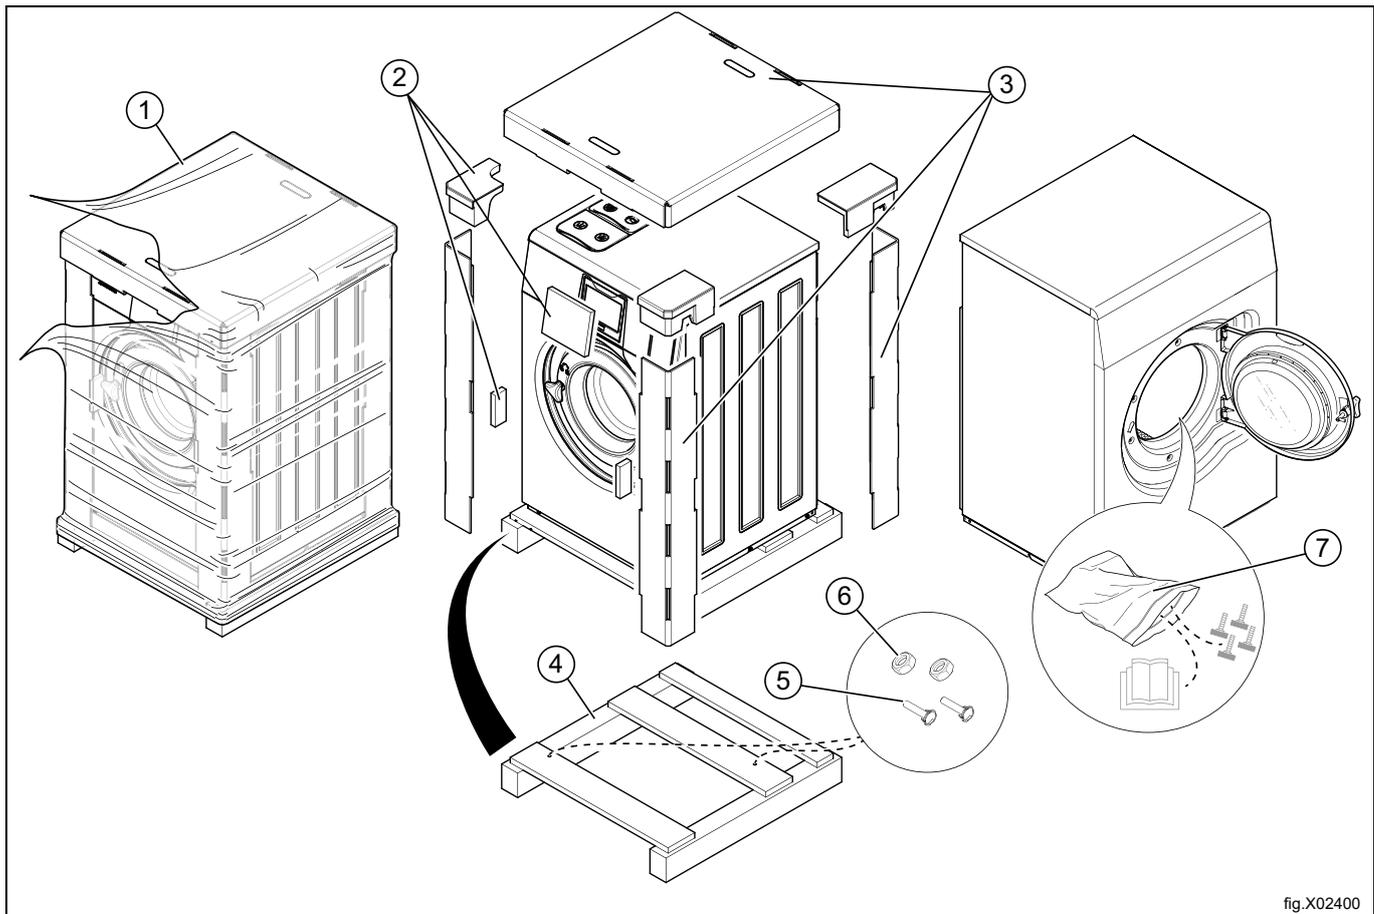


fig.X02400

Fig.	Description	Code	Type
1	Wrapping film	LDPE 4	Plastics
2	Corner protection	PS 6	Plastics
3	Cardboard packaging	PAP 20	Paper
4	Pallet	FOR 50	Wood
5	Screw	FE 40	Steel
6	Nut	FE 40	Steel
7	Plastic bag	PET 1	Plastics

4.3 Siting

Install the machine close to a floor drain or open drain.

The machine should be positioned so that there is plenty of room for working, both for the user and service personnel. The figure shows minimum distance to a wall and/or other machines. Failure to respect the prescribed distances will prevent easy access for maintenance and service operations.

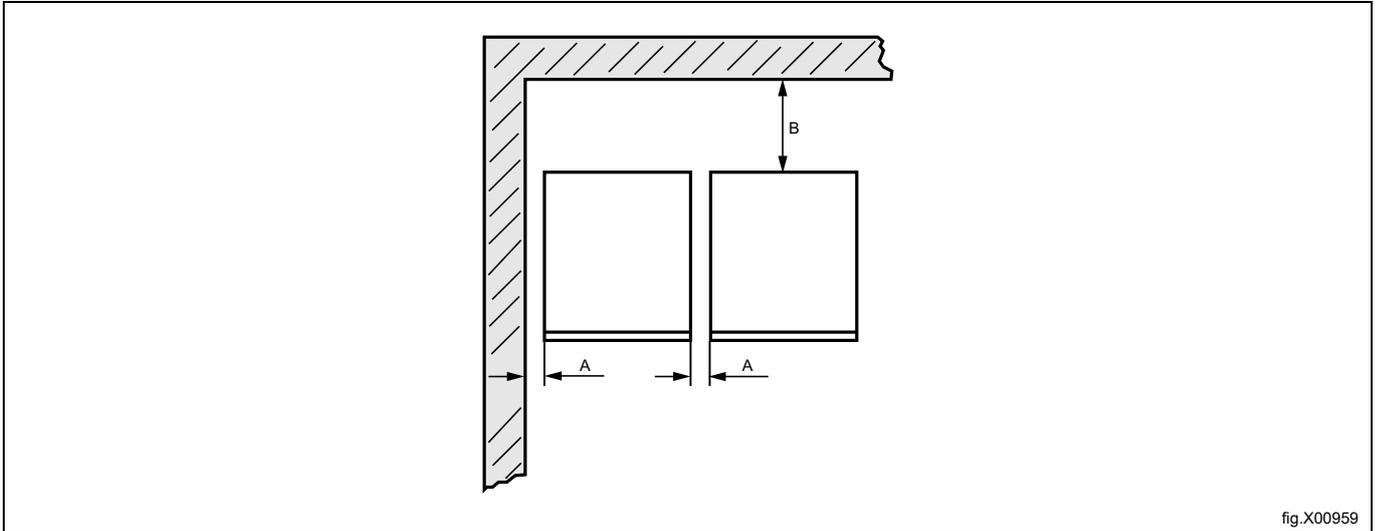


fig.X00959

A	25 mm / 1 inch
B	500 mm / 20 inch

4.4 Mechanical installation

If the machine is not to be mounted on a base the machine must be fastened to the floor with the enclosed expansion bolts.

The table shows the correct position of feet and drilling points.

EUD-615, EUD-618, EUD-625: Mark and drill two holes (\varnothing 8 mm / 5/16 inch) about 40 mm / 1 9/16 inch deep in position (1).

EUD-630, EUD-645, EUD-660, EUD-680: Mark and drill two holes (\varnothing 10 mm / 3/8 inch) about 50 mm / 1 15/16 inch deep in position (1).

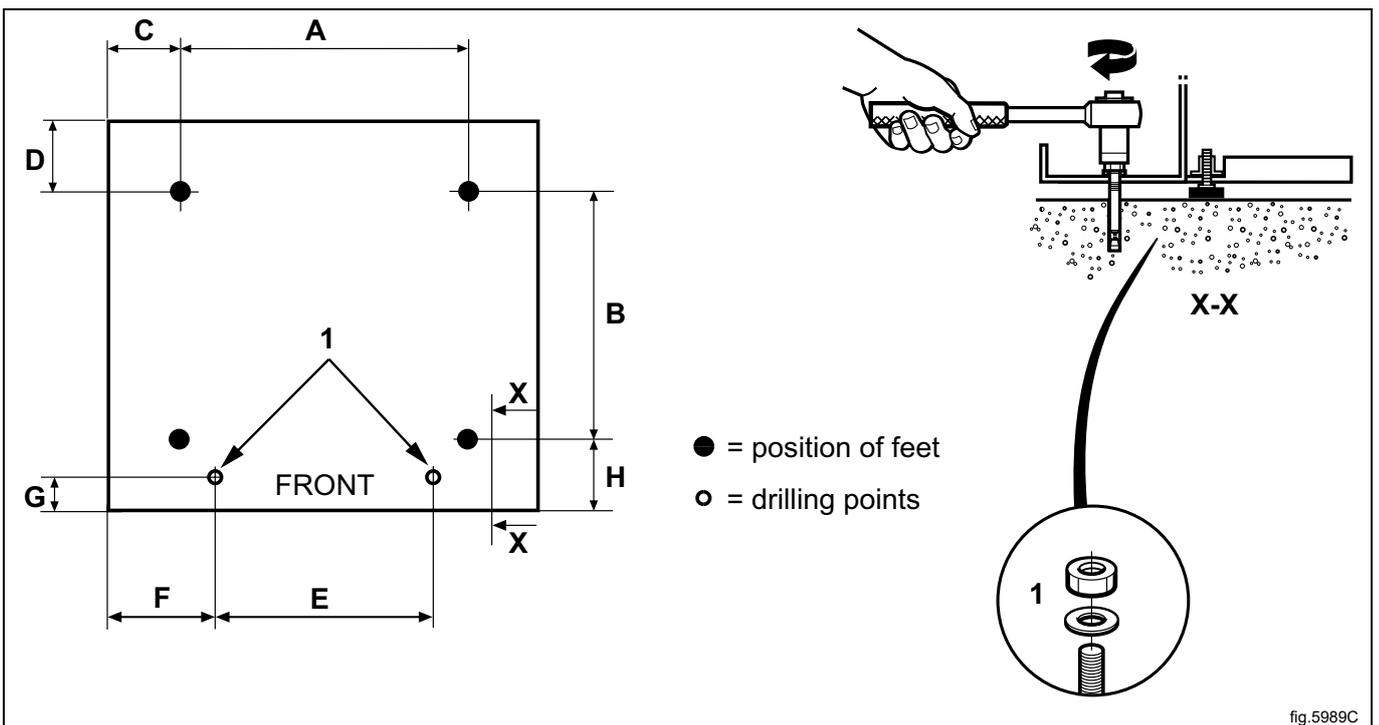


fig.5989C

mm inch	A	B	C	D	E	F	G	H
EUD-615	495 19 1/2	460 18 1/8	110 4 5/16	125 4 15/16	375 14 3/4	170 6 11/16	40 1 9/16	100 3 15/16
EUD-618	495 19 1/2	460 18 1/8	110 4 5/16	125 4 15/16	375 14 3/4	170 6 11/16	40 1 9/16	100 3 15/16
EUD-625	575 22 5/8	465 18 5/16	130 5 1/8	140 5 1/2	455 17 15/16	185 7 5/16	35 1 3/8	95 3 3/4
EUD-630	635 25	490 19 5/16	135 5 5/16	175 6 7/8	515 20 1/4	195 7 11/16	65 2 9/16	125 4 15/16
EUD-645	715 28 1/8	545 21 7/16	125 4 15/16	205 8 1/16	595 23 7/16	185 7 5/16	65 2 9/16	125 4 15/16
EUD-660	790 31 1/8	615 24 3/16	115 4 1/2	180 7 1/16	670 26 3/8	175 6 7/8	65 2 9/16	125 4 15/16
EUD-680	900 35 7/16	835 32 7/8	60 2 3/8	140 5 1/2	670 26 3/8	175 6 7/8	60 2 3/8	80 3 1/8

Place the machine over the two drilled holes. The holes are at the front of the machine.

Level the machine with the feet of the machine. Screw in the feet as much as possible before starting to level the machine. This will make the machine stand steadier.

The maximum height adjustment of the feet is 30 mm / 1 3/16 inch for EUD-615, EUD-618, EUD-625 and 50 mm / 1 15/16 inch for EUD-630, EUD-645, EUD-660, EUD-680.

Insert the expansion bolts (1) into the holes drilled in the floor. Fit the washers and nuts and tighten with tightening torque 5 Nm / 3.7 lbf.ft.



It is of the utmost importance that the machine is placed in level, from side to side as well as front to rear. Remount the panels when ready.

5 Water connection

All water intake connections to the machine should be fitted with manual shut-off valves and filters, to facilitate installation and servicing.

Water pipes and hoses should be flushed clean before installation.

The machine shall be connected with new water hoses. Re-used water hoses must not be used.



Hoses are to be of an approved type and grade and comply with national regulations.

After installation hoses must hang in gentle arcs.

All connectors present on the machine must be connected to the water supply or the machine may not function properly. The table shows the possible connection options, which will depend on the water types to be connected to the machine. Information is also available on the panel above the connections.

Note!

The water supply should be within the recommended hardness range of 3 grains or less per gallon. Higher hardness may cause excessive formation of limescale. Chlorides must not exceed 30 ppm. The buildup of limescale will negatively affect operation, performance and warranty approval.

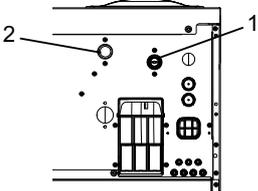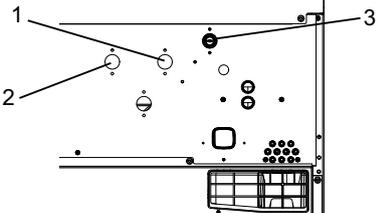	Water type	Water connection
	EUD-615, EUD-618, EUD-625 • Cold and hot	EUD-615, EUD-618, EUD-625 1. Cold (for detergent dispenser) 2. Hot
	EUD-630, EUD-645, EUD-660, EUD-680 • Cold and hot	EUD-630, EUD-645, EUD-660, EUD-680 1. Cold 2. Hot 3. Cold (for detergent dispenser) / Hot

There is also an extra water valve which can be used for hard water if soft water is connected to 1.

This valve can also be used for water re-use from tank.

If pump is used, it is only a water connection without valve.

Water pressure:

Continuous operating pressure: 50–800 kPa / 8–116 psi (0.5-80 kp/cm²)

Maximum: 1000 kPa / 145 psi (10 kp/cm²)

Recommended: 200–600 kPa / 30–90 psi (2–6 kp/cm²)

Recommended water hardness: 3 grains per gallon

Recommended pH-range: 7.0–8.0

Acceptable range for chloride concentration: 0–30 ppm

Note!

If the water pressure is below the minimum value, the wash result can not be guaranteed for certain program.

6 Connection of external dosing systems

Depending on which type of dosing system that is going to be connected, follow the instructions enclosed with the dosing system.

The following is some preparations that can be made on the machine.

6.1 Jetsave and Dosave

6.1.1 Connection of the tube

The machine is prepared for connection to the dosing systems Jetsave and Dosave.

The connections are closed at delivery. Open any of the connections that shall be used by drilling a hole where the tube shall be connected.

Note!


Make sure there is no burrs left after drilling. When removing burrs make sure burrs does not fall into the siphon breaker.

A = \varnothing 17 mm / 11/16 inch (used for dosing systems).

B = \varnothing 6 mm / 1/4 inch (used for external dosing systems only).

C = Only used for flush manifold. (Separate instructions enclosed when ordering).

Depending on which detergent container that is used on the machine, the rear view can be either of the examples below.

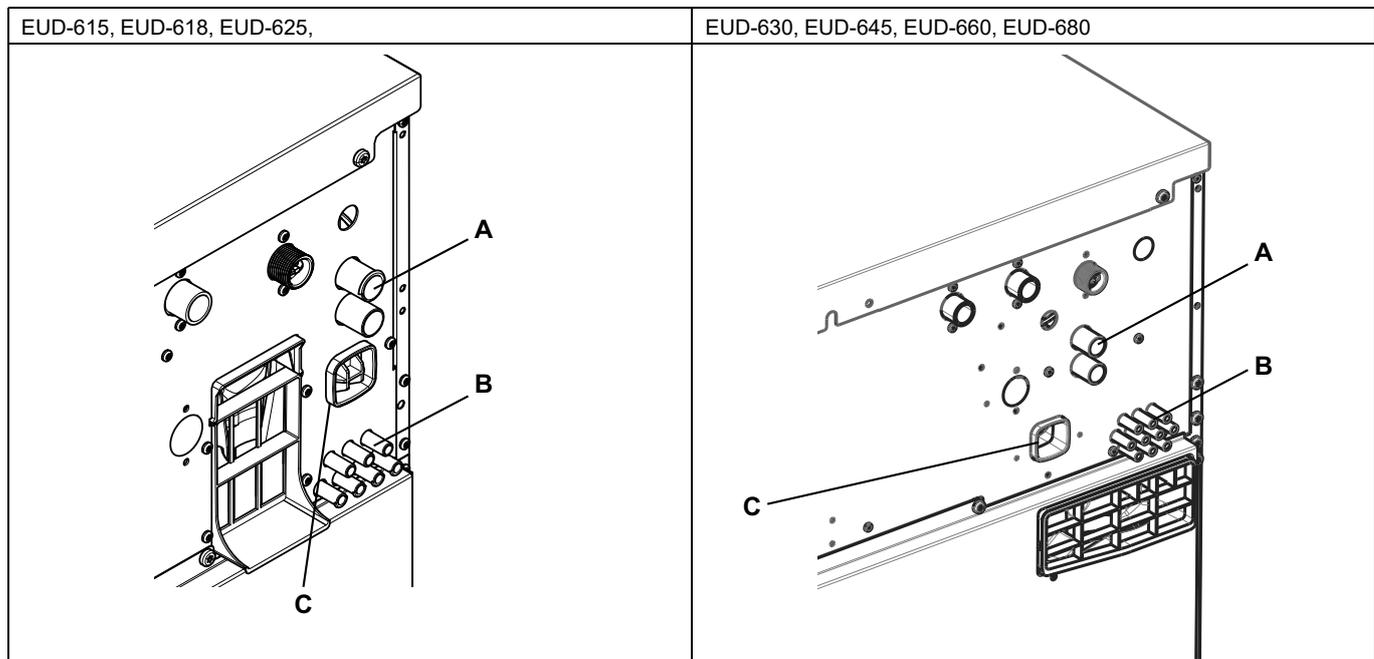

Always connect hoses on connections (A) with a hose clamp.

For connections (B); if the hoses are made of a soft material such as silicone or similar, use a cable tie to fasten the hose on the connection. If the hoses are made of a hard material, it is not recommended to make the connection tighter by using a cable tie.


Note!

Equipment for external dosing must only be connected to work on pump pressure and not on network pressure.

7 Drain connection

Connect a 75 mm / 3 inch (50 mm / 1 15/16 inch for models EUD-615, EUD-618, EUD-625) pipe or rubber hose to the machine's drain pipe, ensuring a downward flow from the machine. Avoid sharp bends which may prevent proper draining.

The machine may drain in to a drainage through or into a closed drain system. In either case, be sure to comply with all applicable national and local plumbing code provisions.

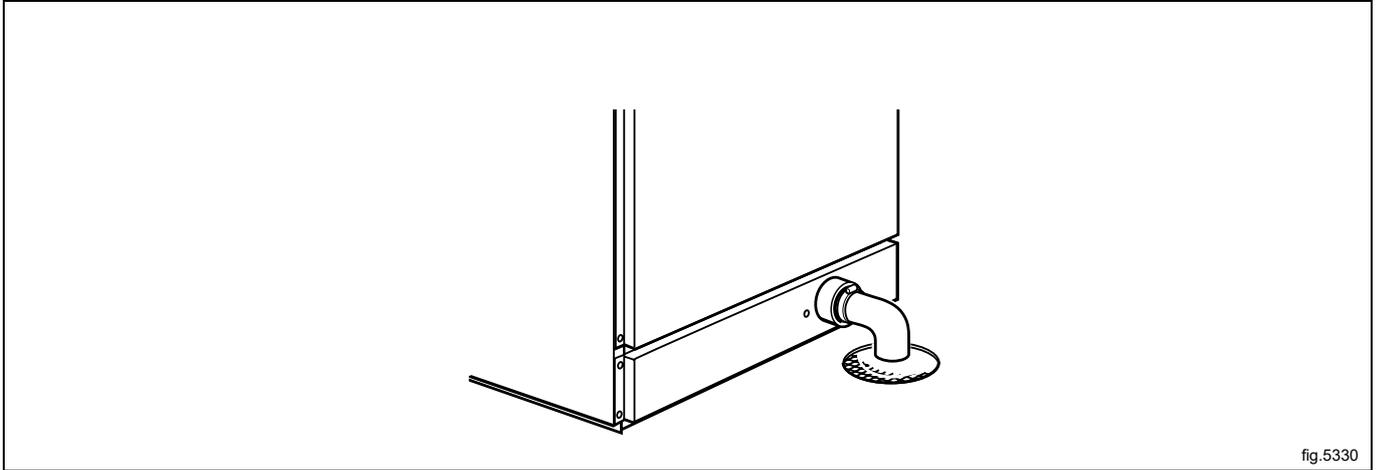


Drain pump (for models EUD-615, EUD-618, EUD-625)

The drainage pipe should be located over a floor drain, drainage channel or the like.

The highest part of the drain hose shall be positioned according to the figure.

Make sure there is no kinks in the hose.

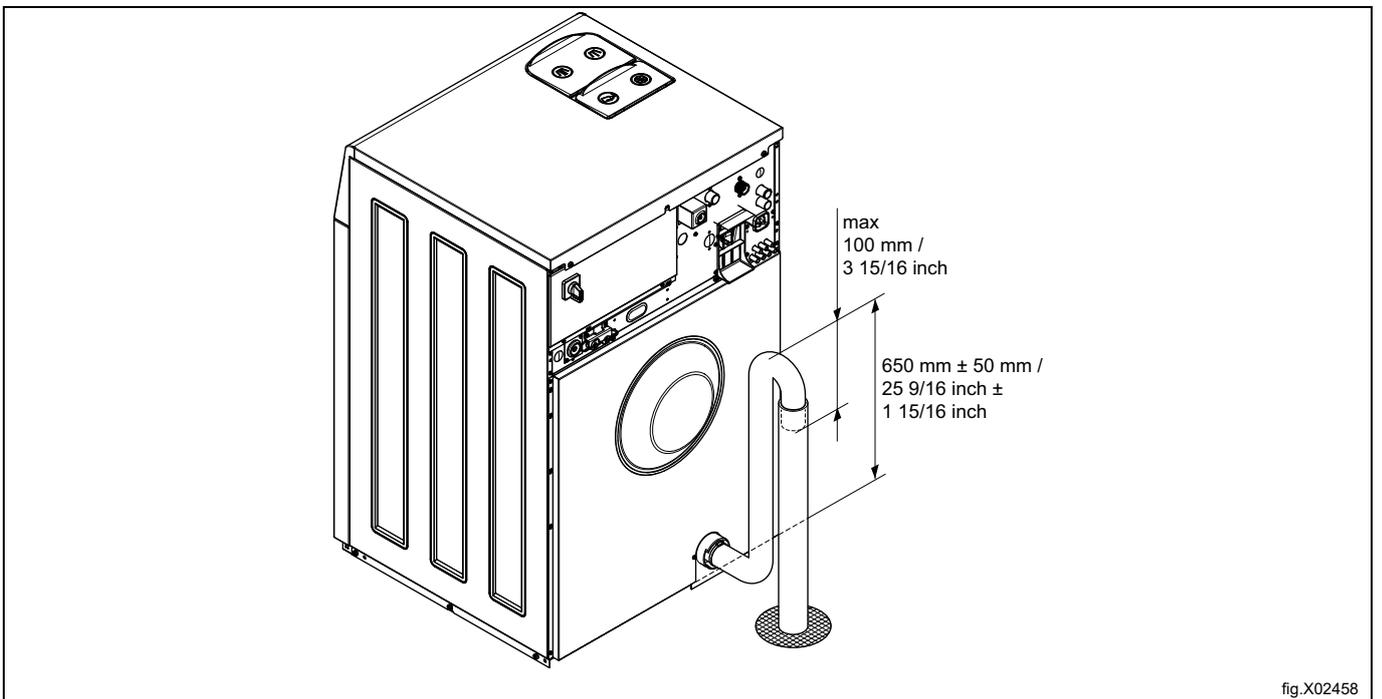

8 Electrical connection

8.1 Electrical installation



The electrical installation may only be carried out by qualified personnel.



Machines with frequency-controlled motors can be incompatible with certain types of earth leakage circuit breaker. It is important to know that the machines are designed to provide a high level of personal safety, which is why items of external equipment such as earth leakage circuit breakers are not necessary but is recommended. If you still want to connect your machine across an earth leakage circuit breaker, please remember the following:

- contact a skilled, authorised installation company to ensure that the appropriate type of breaker is chosen and that the dimensioning is correct
- for maximum reliability, connect only one machine per earth leakage circuit breaker
- it is important that the earth wire is properly connected.

An individual electrical disconnect must be provided in proximity to each machine.

In instances where the machine is not equipped with an omni-polar switch, one must be installed beforehand.

Mount a multi-pole switch prior to the machine to facilitate installation and service operations.

The connecting cable shall hang in a gentle curve.

When connecting to a terminal block, the connection cable shell must be stripped 10-11 mm / 3/8 — 7/16 inch. The cable area must be at least 0.5 mm² / 0.0008 inch² and no more than 4 mm² / 0.006 inch² (AWG12/AWG20). The terminal block used is a spring loaded cage clamp.

8.2 Electrical connections

EUD-615

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 1~	60	2.0/3.0	5.2/3.4	15/20
	208-240V 1~	60	5.4/7.5	5.7/7.8	30/50
	208-240V 3~	60	2.0/3.0	5.2/3.4	15/15
	208-240V 3~	60	5.4/7.5	5.7/7.8	20/25
	440V 3~	60	5.4/7.5	5.7/7.8	15/15
	480V 3~	60	5.4/7.5	5.7/7.8	15/15
Non heated/Steam heated	120/440/480 1/3~	60	¹	1.0	15
	208-240V 1~	60	¹	0.9	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

EUD-618

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 1~	60	2.0/3.0	5.2/3.4	15/20
	208-240V 1~	60	5.4/7.5	5.7/7.8	30/50
	208-240V 3~	60	2.0/3.0	5.2/3.4	15/15
	208-240V 3~	60	5.4/7.5	5.7/7.8	20/25
	440V 3~	60	5.4/7.5	5.7/7.8	15/15
	480V 3~	60	5.4/7.5	5.7/7.8	15/15
Non heated/Steam heated	120/440/480 1/3~	60	¹	1.0	15
	208-240V 1~	60	¹	0.9	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

EUD-625

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 1~	60	3.0/7.5/10.0	3.1/7.6/10.1	20/40/60
	208-240V 3~	60	3.0/7.5/10.0	3.1/7.6/10.1	15/25/30
	440V 3~	60	7.5/10.0	7.6/10.1	15/20
	480V 3~	60	10.0	10.1	15
Non heated/Steam heated	120/440/480V 1/3~	60	¹	1.1	15
	208-240V 1~	60	¹	1.0	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

EUD-630

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 1~	60	4.8/13.0	5.2/13.4	30/70
	208-240V 3~	60	4.8/13.0	5.2/13.4	20/40
	440V 3~	60	13.0	13.4	25
	480V 3~	60	13.0	13.4	25
Non heated/Steam heated	120V 1~	60	¹	1.6	20
	208-240V 1~	60	¹	1.5	15
	440/480V 1/3~	60	¹	1.6	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

EUD-645

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 3~	60	18.0	18.5	60
	440V 3~	60	18.0	18.5	30
	480V 3~	60	18.0	18.5	30
Non heated/Steam heated	208-240V 1~	60	¹	2.5	15
	440/480V 1/3~	60	¹	2.6	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

EUD-660

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 3~	60	19.8/23.0	20.5/23.7	70/70
	440V 3~	60	21.0/23.0	21.7/23.7	40/40
	480V 3~	60	22.8/23.0	23.5/23.7	40/40
Non heated/Steam heated	208-240V 1~	60	1	2.6	15
	440/480V 1/3~	60	1	2.7	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

EUD-680

Electrical connections					
Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse ITCB A
Electric heated	208-240V 3~	60	19.8/23.0	20.2/23.3	60/70
	440V 3~	60	21.0/23.0	21.4/23.3	35/40
	480V 3~	60	22.8/23.0	23.2/23.4	35/35
Non heated/Steam heated	208-240V 1~	60	1	3.5	20
	440/480V 1/3~	60	1	3.7	15

1. Total power and recommended fuse does not depend on the heating power in those cases.

8.3 Machine connection with ferrite

8.3.1 EUD-630CV, EUD-645CV, EUD-660CV, EUD-680CV

To obtain approved level of EMC, it is mandatory to use the ferrite which is enclosed with above listed models. (Note that this is only valid for those models).

Before connecting to the machine, the protective earth (PE) wire shall be wrapped around the ferrite.

Prepare the power cord by making sure the protective earth (PE) wire is longer than the other wires according to the table.

Wire size	L	x times through
AWG14 or 2.5 mm ²	230 mm / 9 1/16 inch	x 4
AWG12 or 4 mm ²	250 mm / 9 13/16 inch	x 4
AWG10 or 6 mm ²	270 mm / 10 5/8 inch	x 4
AWG8 or 10 mm ²	290 mm / 11 7/16 inch	x 4
AWG6 or 16 mm ²	330 mm / 13 inch	x 4
AWG4 or 25 mm ²	490 mm / 19 5/16 inch	x 4

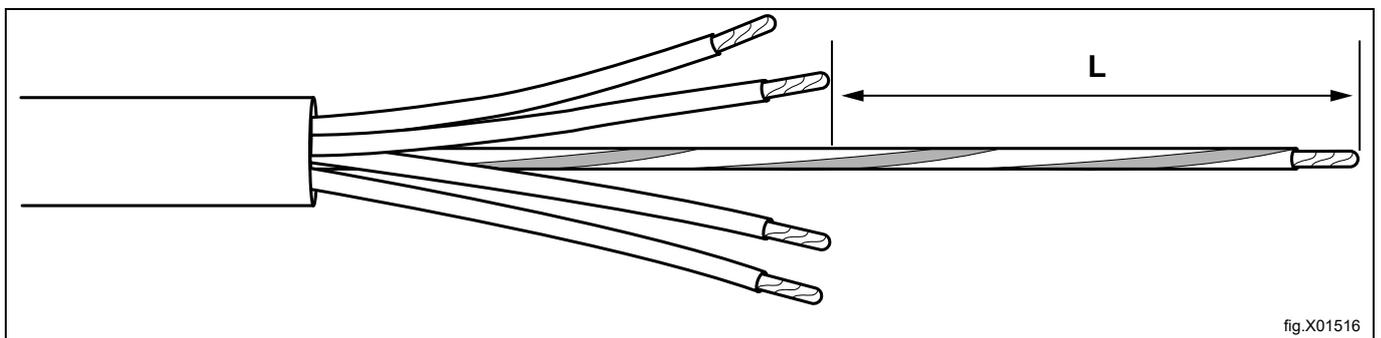


fig.X01516

When the power cord has been prepared according to the table, wrap the protective earth (PE) wire through the ferrite and then connect all wires according to the “Machine connection” section.

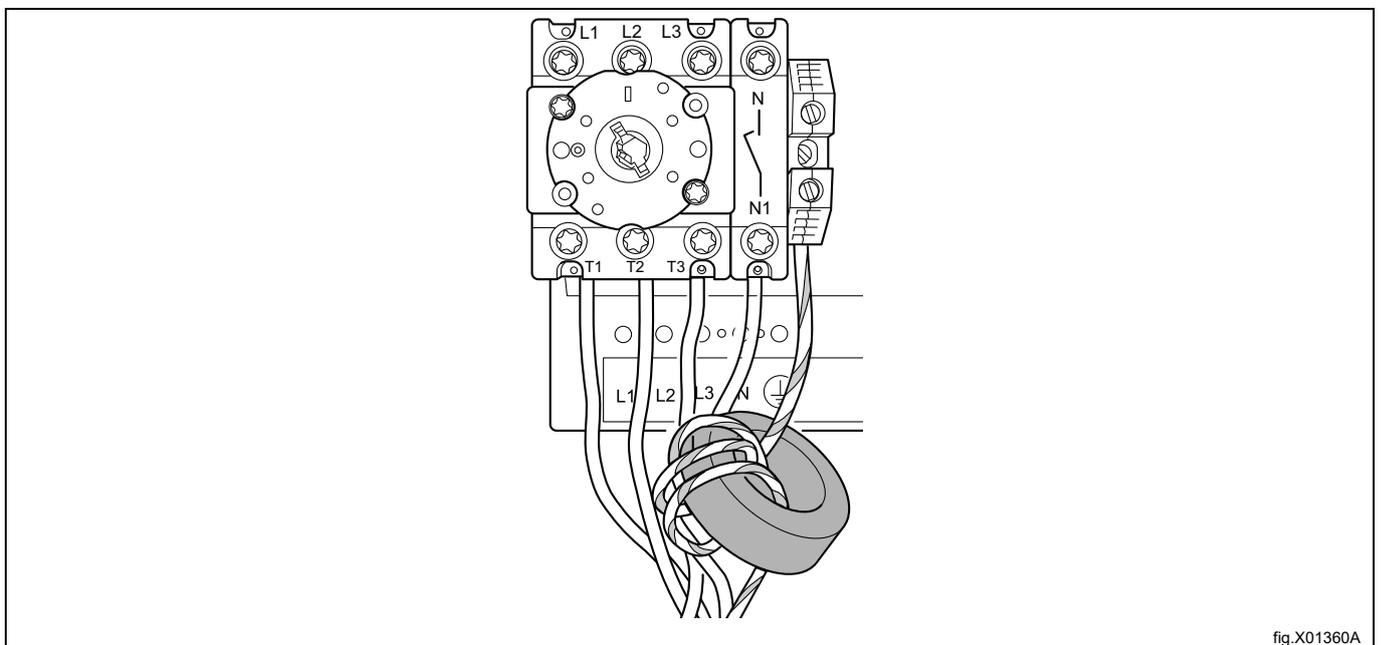


fig.X01360A

8.4 Machine connection

Connect the earth and other wires according to the table.

Single-phase connection		Three-phase connection	
1NAC		3AC	
1AC		3N AC	
1N/1		3N AC	

Single phase machines may be powered either by connection between a phase and neutral or by connecting between two phases.

Example:

Machines for 220-240V single phase may be powered from 380V or 400V or 415V system by connection between a phase and neutral or from 220V or 230V or 240V system by connection between two phases.

8.5 Connector with termination resistor

To maintain stability of internal data bus, it is mandatory to use the connector with termination resistor which is enclosed with all machines.

Connect the connector with termination resistor to connection B at the rear of the machine.

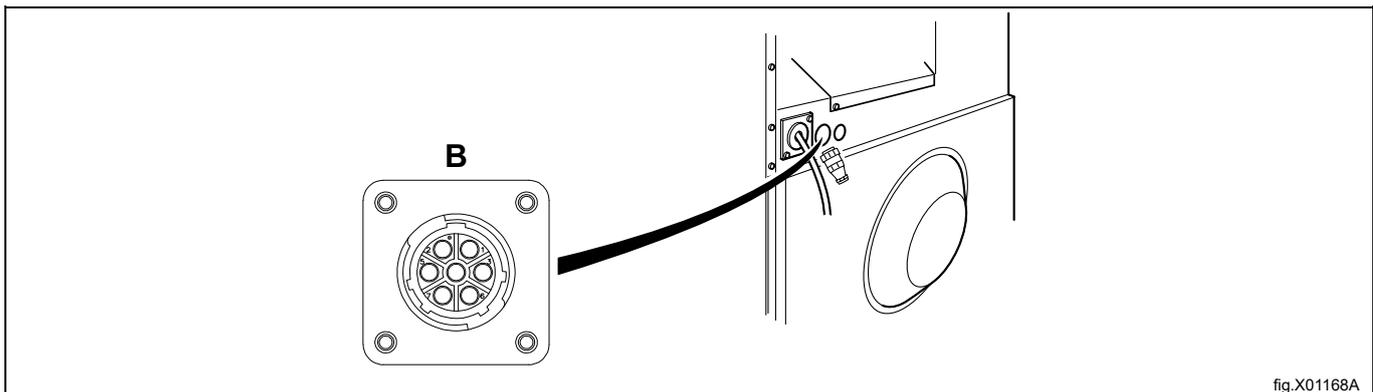


fig.X01168A

8.6 Connection of external functions

8.6.1 Outputs

Depending on machine configuration, the outputs are configured according to the following table:


Connection	Config. 22A	Config. 22B
Terminal 12	Steam valve (if dual heating)	Steam valve (if dual heating)
Terminal 13	n/a	Liquid 1
Terminal 14	n/a	Liquid 2
Terminal 15	n/a </td <td>Liquid 3</td>	Liquid 3
Terminal 16	n/a	Liquid 4
Terminal 18	Program run	Program run

If the external power (e.g. 24V DC) is being used, connect the power supply to terminal 9 and 10.

If the internal power (230V from the machine) is being used, connect a jumper from terminal 1 (N) to 9 and a jumper from terminal 2 (L) to 10. Max load to the outputs is 0.5A.

Note!

On machines with Dual heating, the Steam valve is controlled by internal power (230V), which means that the terminals 9 and 10 are already occupied. Since all outputs share the power source, the rest of the outputs will refer to internal power as well (please refer to chapter “Dual heating and Trigger signals for dosing system without saving”).

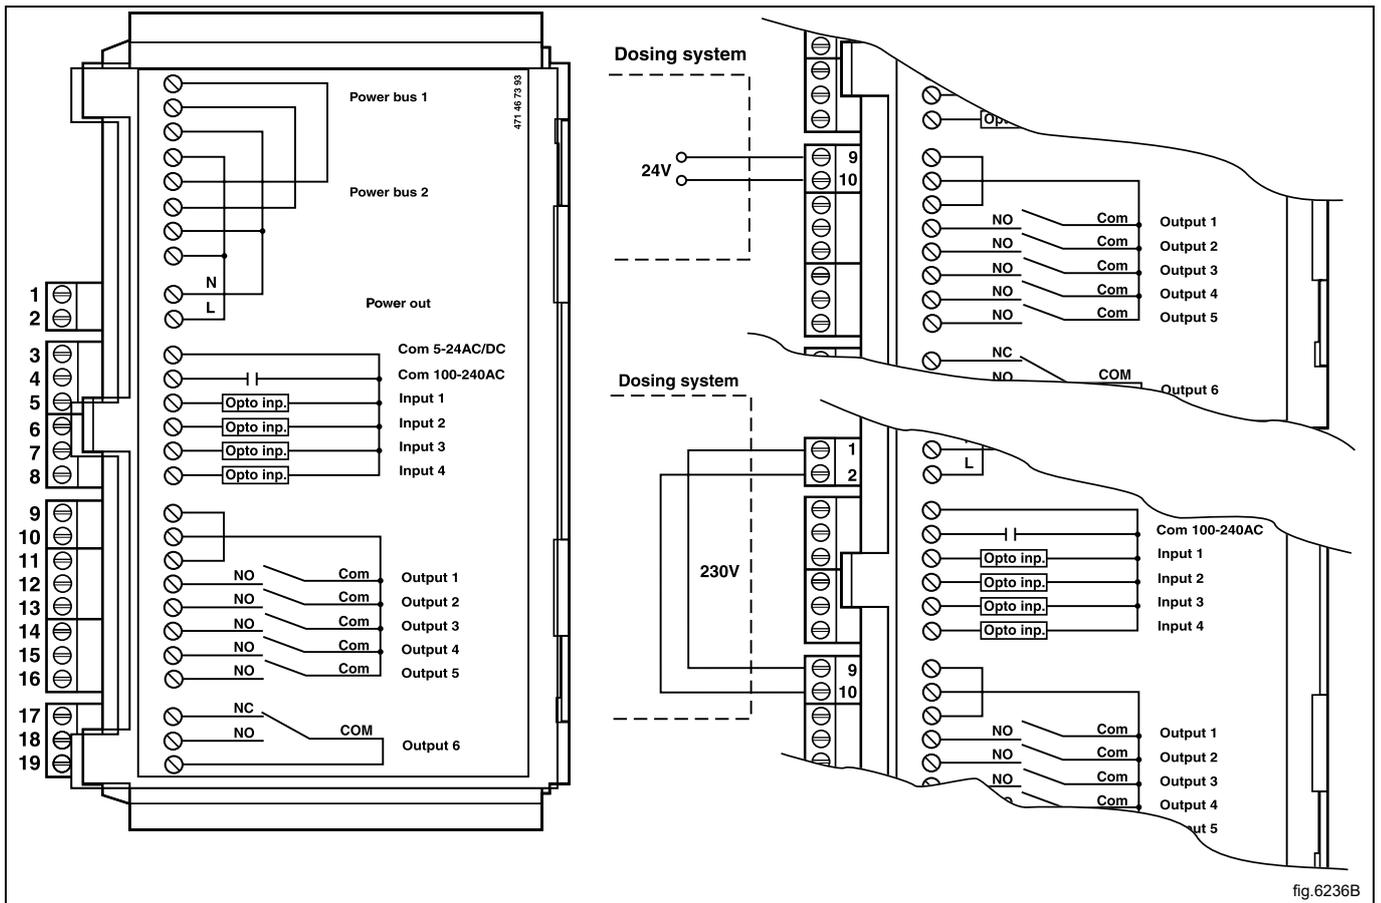

8.6.2 Inputs


Depending on machine configuration, the inputs are configured according to the following table:

Connection	Config. 22A	Config. 22B
Terminal 5	Enable start	Enable start
Terminal 6	Remote start /stop	Remote start /stop
Terminal 7	Coin 1	Coin 1
Terminal 8	Pause	Pause

The signal level for the inputs can be either 5-24V DC/AC or 100- 240V AC.

For 5-24V, connect the signal reference to terminal 3 and for 100-240V to terminal 4. The potentials on the inputs cannot be mixed!

The figure shows an example of connecting a 24V pause signal. The program will pause for as long as the pause signal remains active (high), e.g. while waiting for central dosing system to be ready.

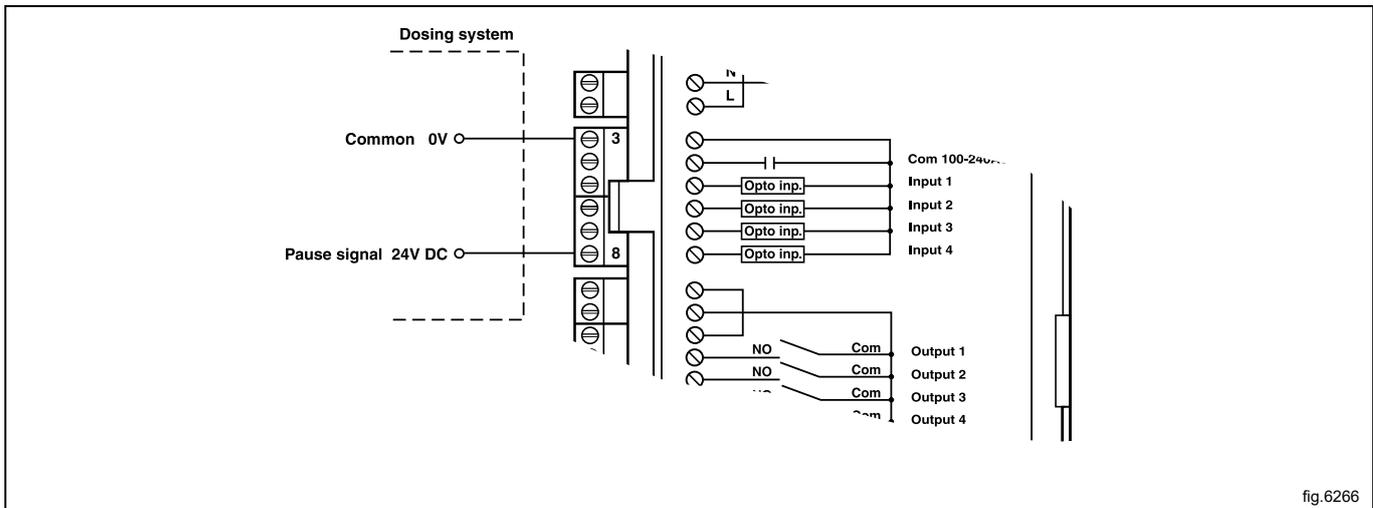

8.7 Functions for I/O-boards

The electrical schematic can be one of the following:

8.7.1 Enable start (22A, 22B)

This signal can be used to permit the start of the program when the machine is in standby.

Once permission to start has been granted, the signal from the central payment or the booking system must remain active (high) until the machine starts.

To receive the feedback signal from the machine, 230V or 24V must be connected to terminal 19. The feedback signal on terminal 18 will remain active (high) during entire program.

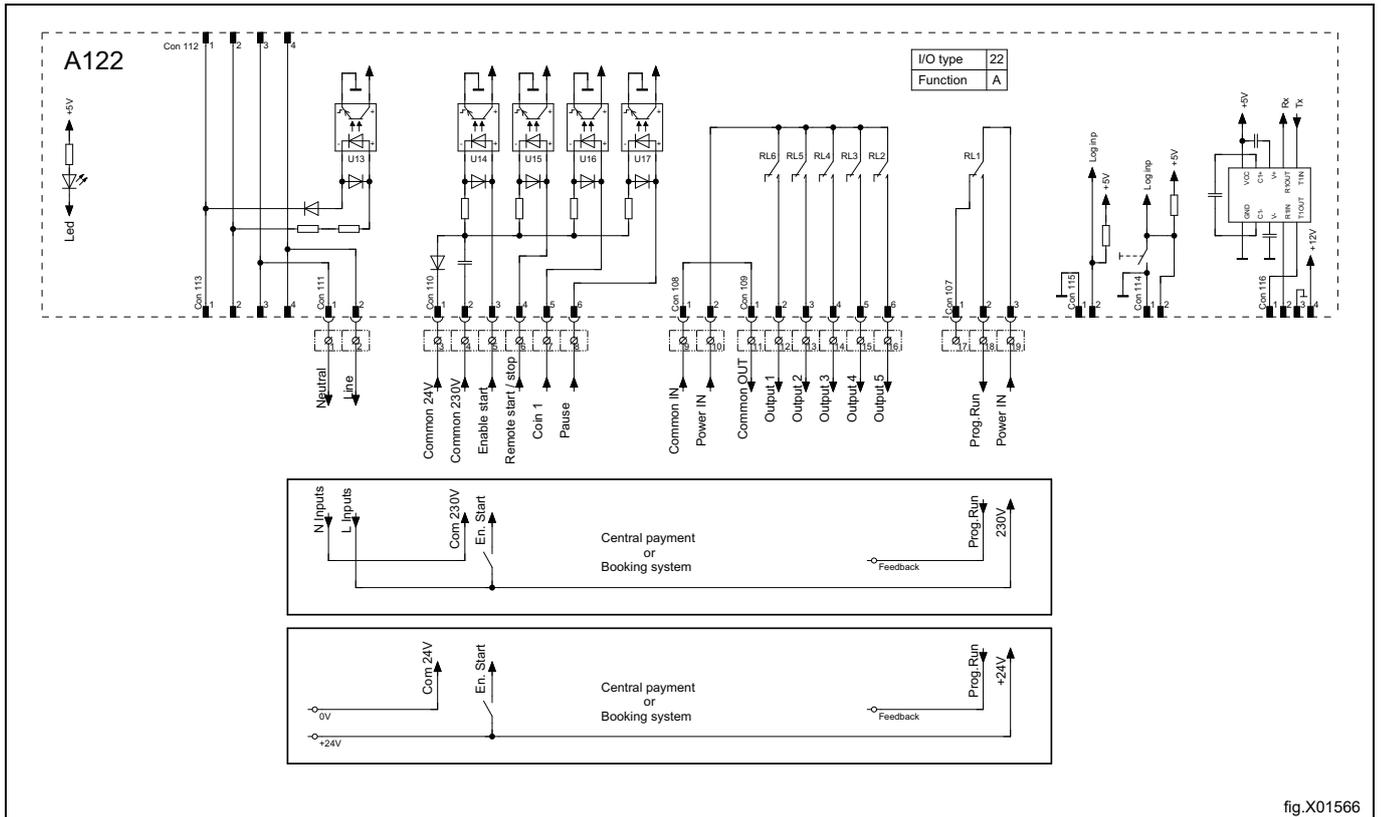



fig.X01566

8.7.2 Remote start/stop (22A, 22B)

This signal can be used to start the program when the machine is in standby, to pause the cycle when running and to continue the cycle when paused.


The central payment system must provide a pulse to start the program.

To receive the feedback signal from the machine, 230V or 24V must be connected to terminal 19. The feedback signal on terminal 18 will remain active (high) during entire program.

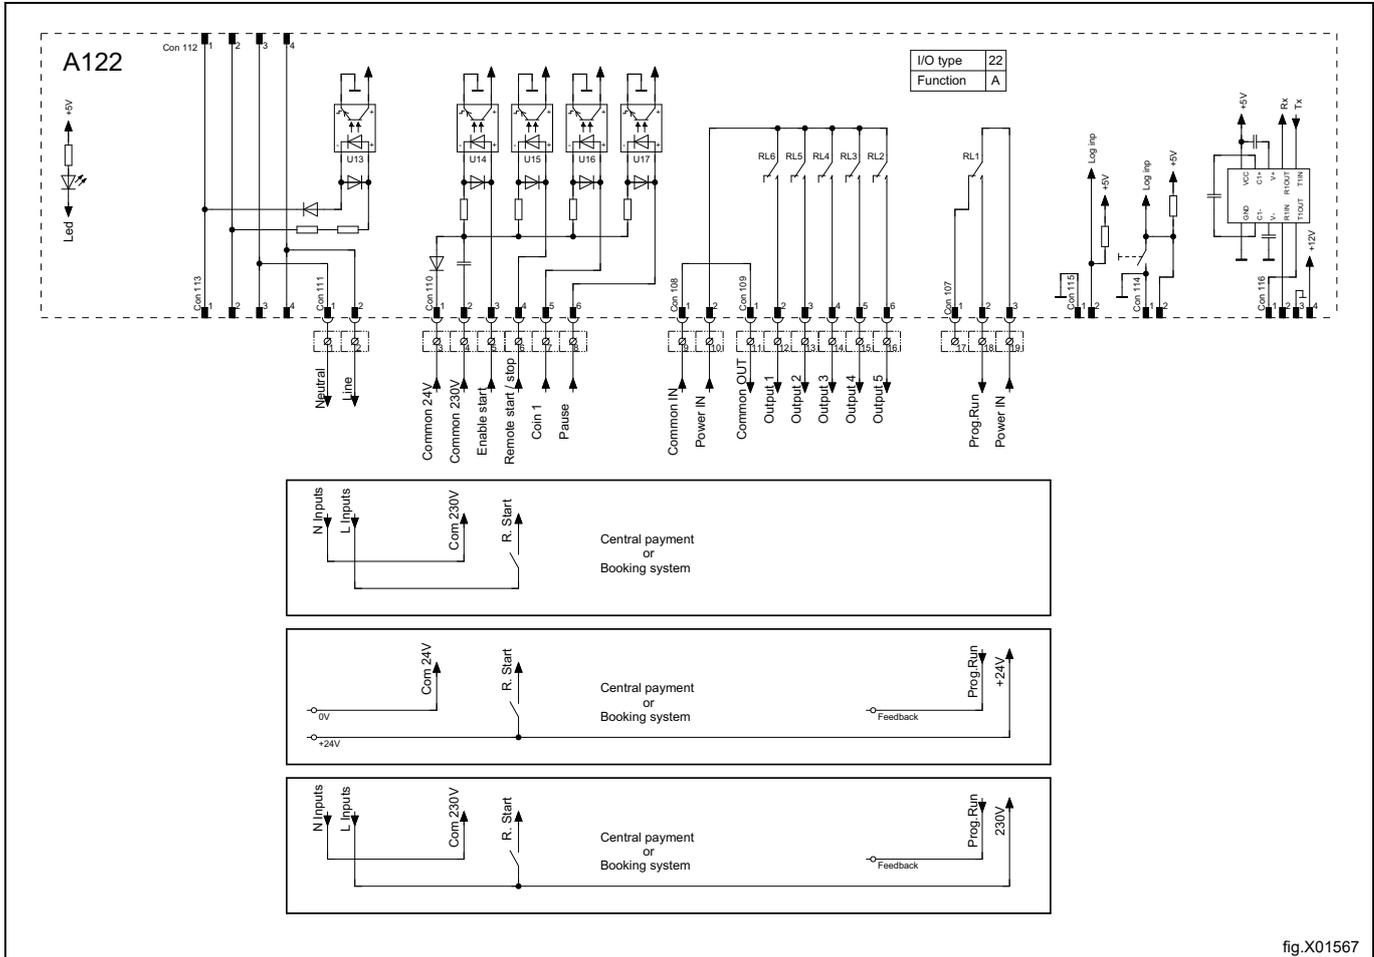

8.7.3 External coin meter/Central payment (22A, 22B)

The signal received from external coin meter must be a pulse between 300–3000 ms (500 ms is recommended) with a minimum pause of 300 ms (500 ms is recommended) between two pulses.

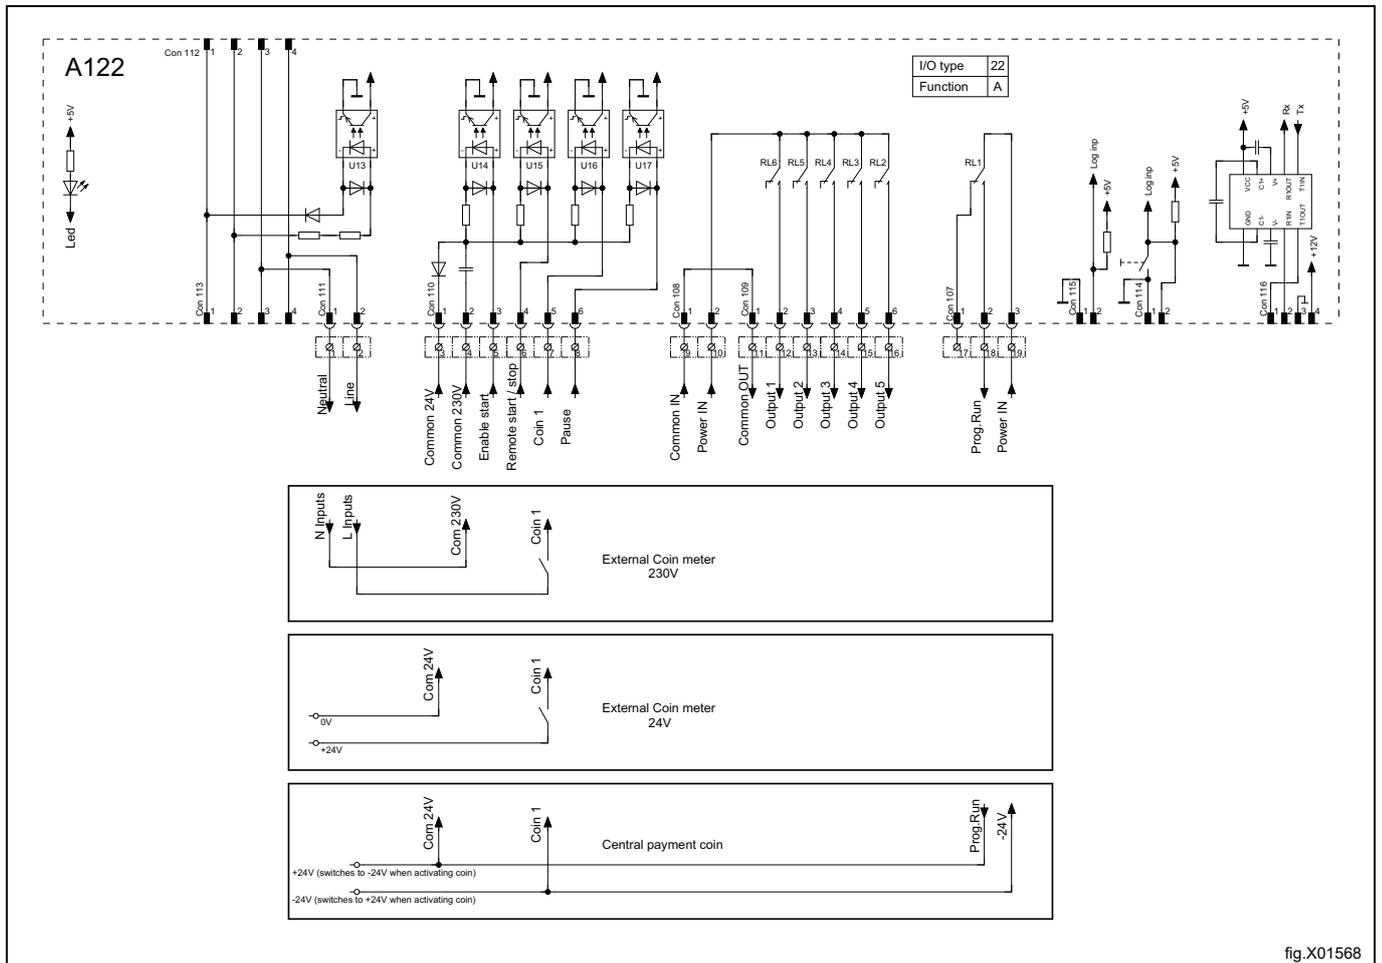

8.7.4 Pause (22A, 22B)

This signal can be used to pause the program when running.

When the signal is activated, the program will pause for as long as the signal remains active (high), e.g. while waiting for central dosing system to be ready.


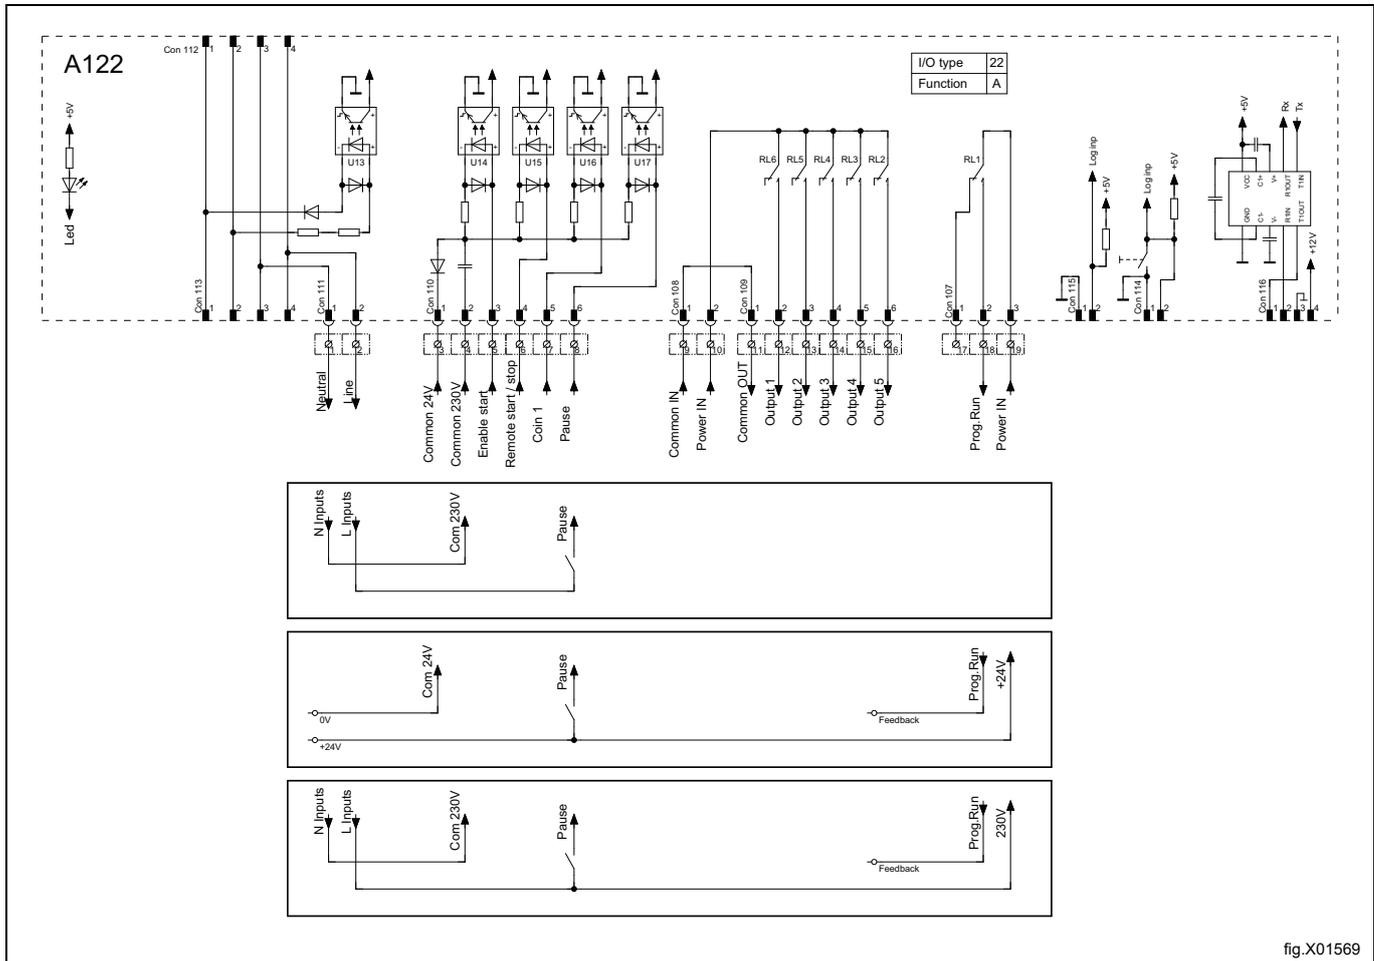


fig.X01569


8.7.5 Dual heating (22A, 22B)

This output is used to activate the steam valve on machines made for dual heating.

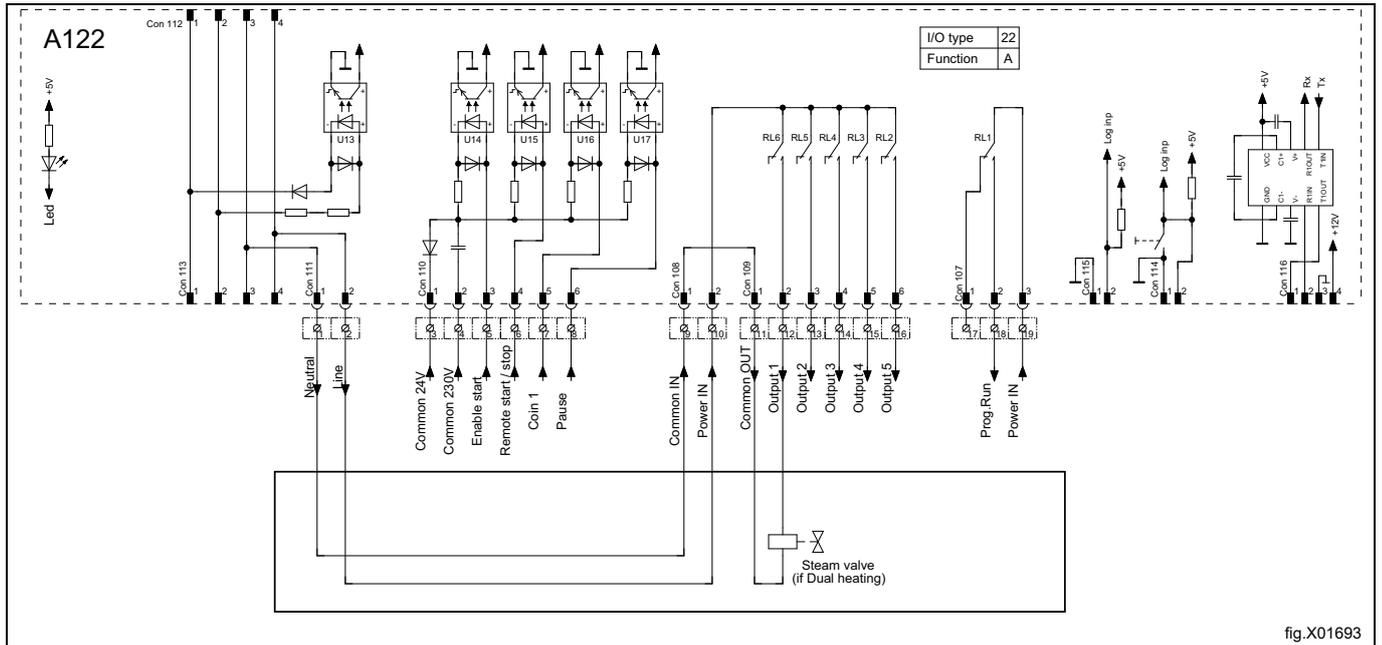

8.7.6 Trigger signals for dosing system without saving (22B)

The following outputs can be used as trigger signals for dosing system or for activation of external pumps.

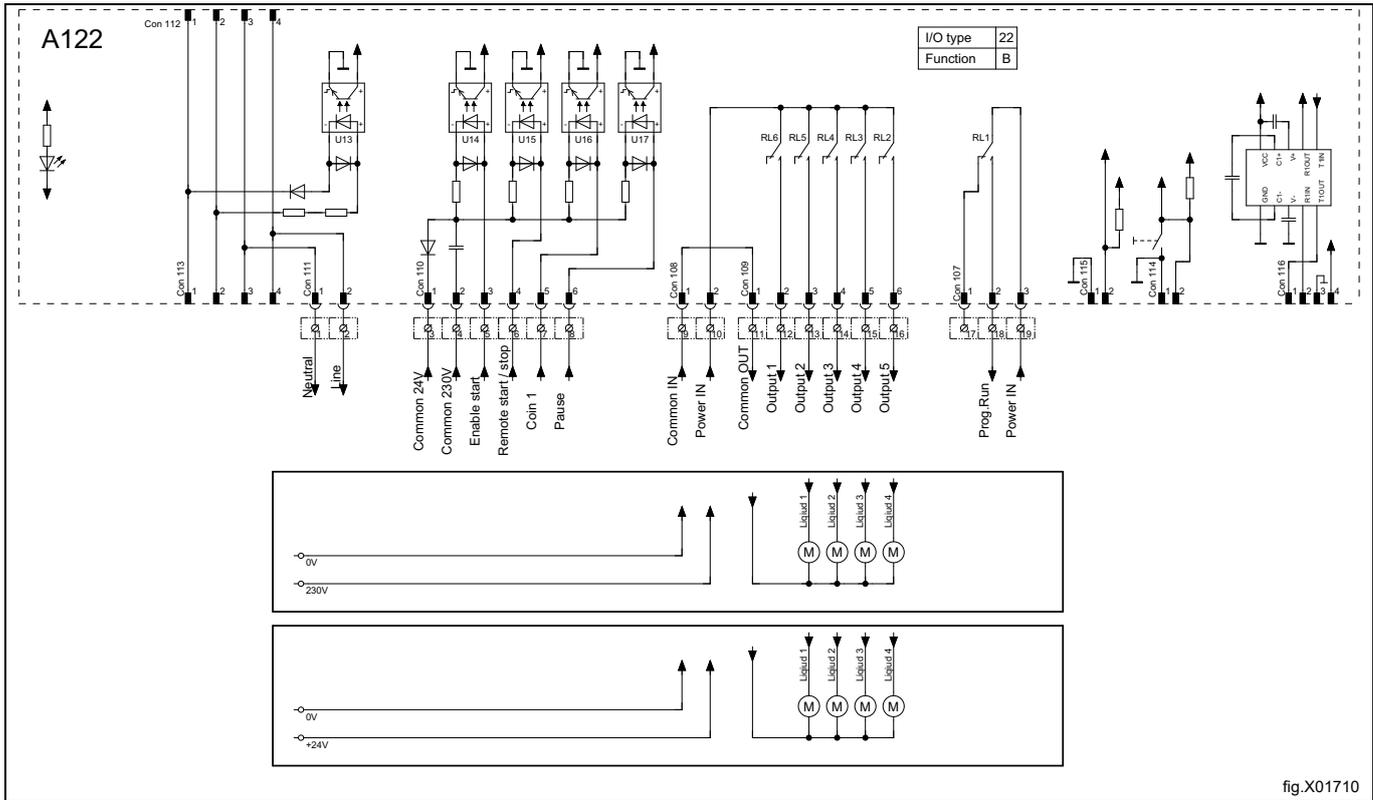

8.7.7 Dual heating and Trigger signals for dosing system without saving (22B)

On machines with Dual heating, the trigger signals refer to the internal power (230V). In this case, no other power sources are allowed.

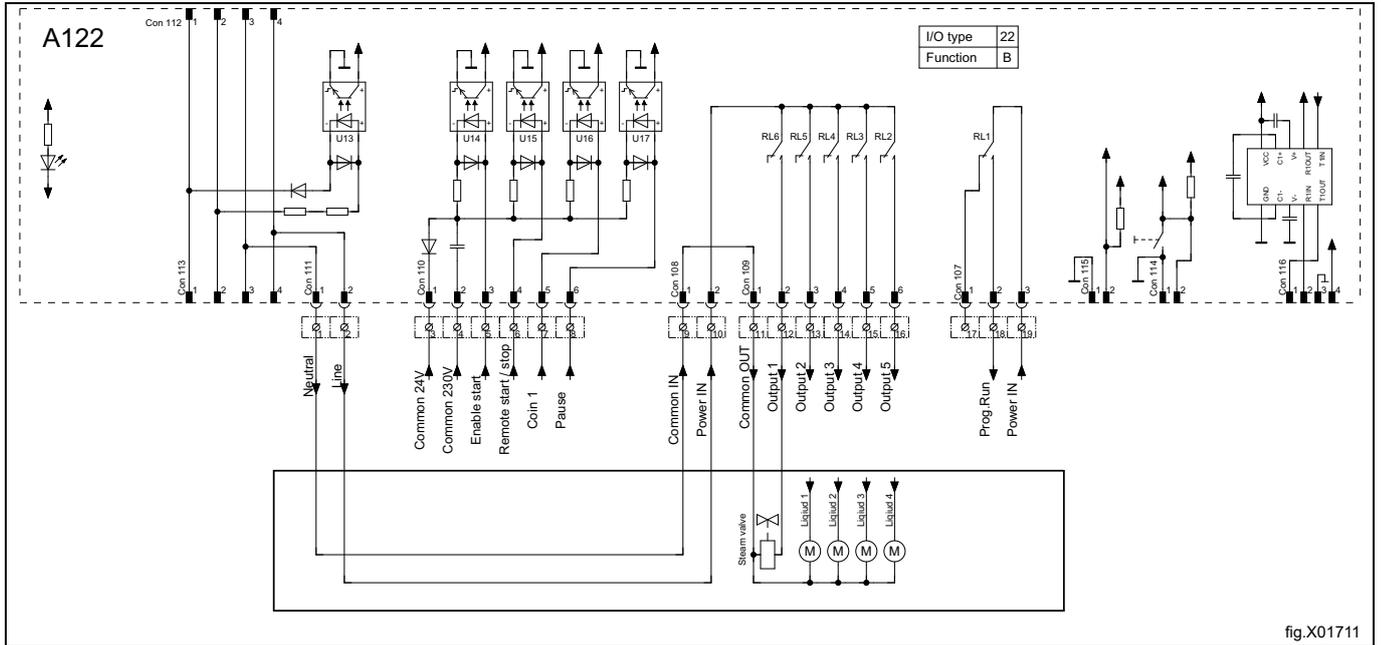


fig.X01711

8.8 Converting heating elements

8.8.1 EUD-615, EUD—618 and EUD-625 can be converted from 400-415V 3AC to 230-240V 1AC with reduced power

Disconnect the power to the machine.

Demount the front panel and remove the cover to the heating elements.

Remove the blue cables.


Move cables 357/BN on E1 and 358/GY on E3 from the red to the white terminals on each element according to the figure.

Remount the cover to the heating elements and remount the cover panel.

Demount the cover panel to the contactors. Shift position on cables 357/BN and 358/GY on heating contactor K21 according to the figure.

Move cables L3 to N according to the figure.

Remount the cover panel to the contactors.

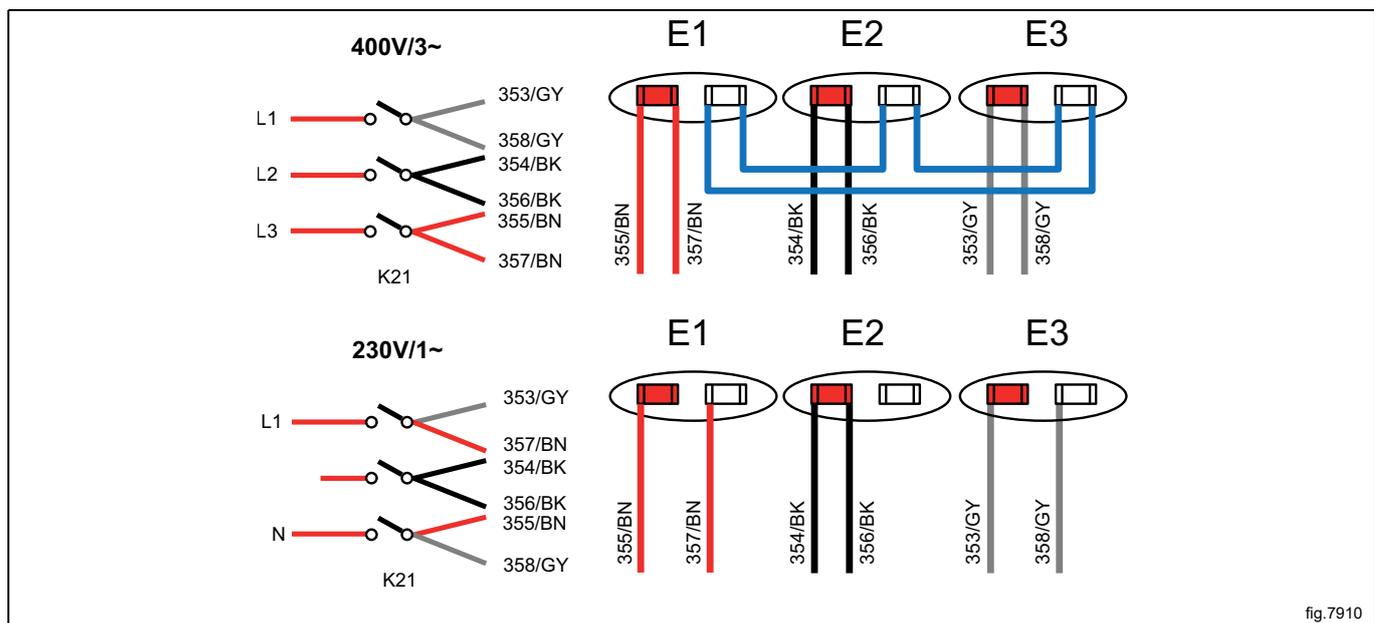

Connect the power to the machine.


Check that all terminals and wires are secure and test run the machine on a short program with 60°C to ensure that it does heat up.

8.8.2 EUD-630 can be converted from 380-415V 3N AC to 220-240V 1N AC with reduced power

Disconnect the power to the machine.

Demount the cover panel to the electrical connections.

Remove the cables that are connected to K21:2 and K22:6. Move the remaining cables from L2 and L3 to L1 or N according to the figure.

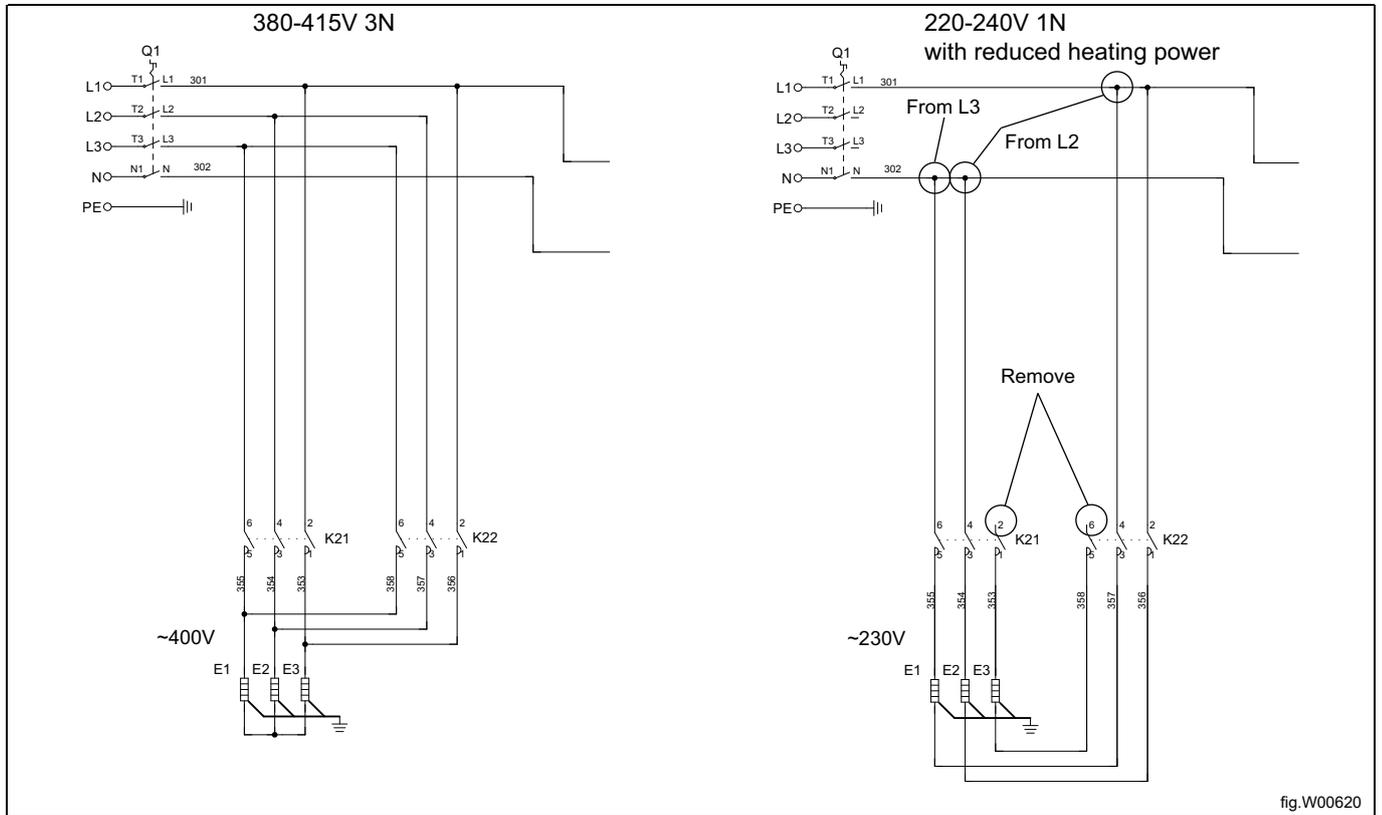

Remount the cover panel to the electrical connections.

Connect the power to the machine.



Check that all terminals and wires are secure and test run the machine on a short program with 60°C to ensure that it does heat up.

9 Steam connection


Inlet pipes connected to the machine must be equipped with a manual shut-off valve to facilitate installation and servicing. The connection hose must be of type ISO/1307- 1983 or equivalent.

Connection size at filter: DN 15 (BSP 1/2").

Demount the top panel (A). Demount the casing (B).

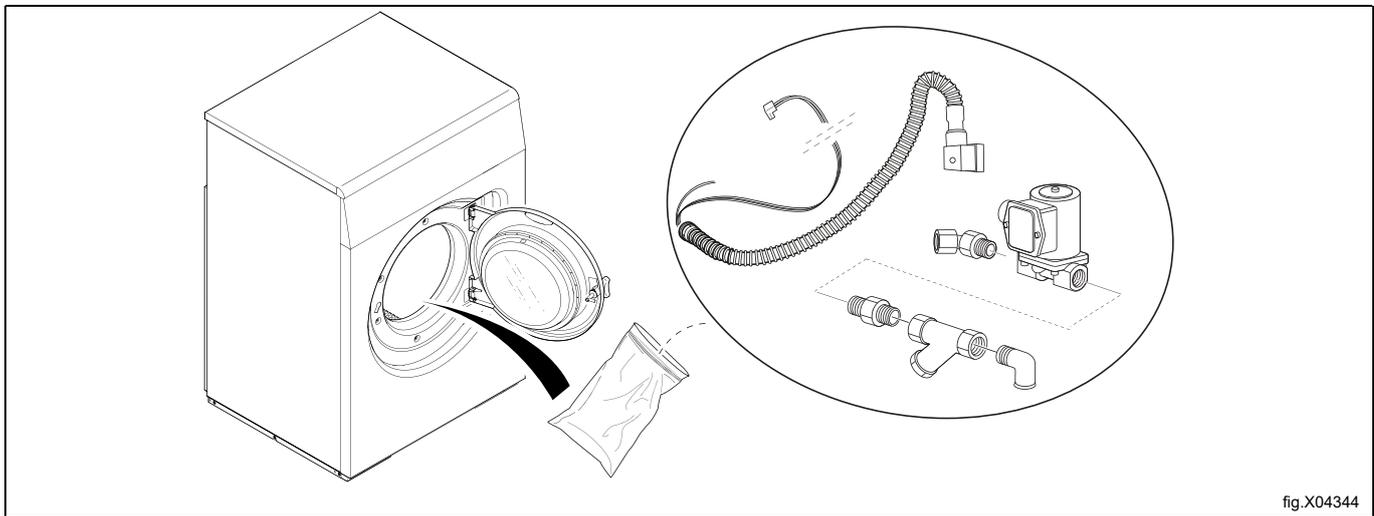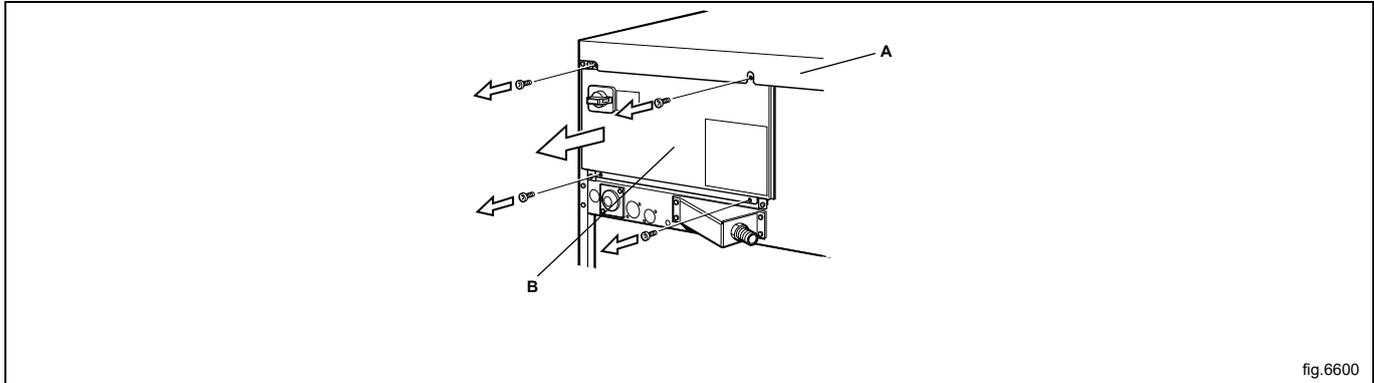

Mount the nipple to the steam valve. Mount the steam valve on the machine. Mount nipple, strainer and elbow. Note the direction of the strainer. Mount steam hose to the elbow. Check that there are no sharp angles or bends on the connected steam hose.

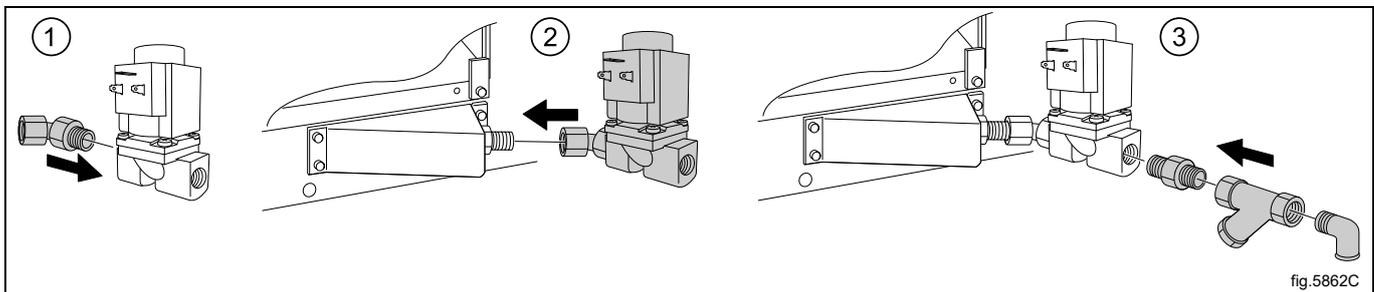

Mount the hose with wires between steam valve and machine. Connect the wires to the steam valve. Connect ground cable to the terminal ground connection. Connect the "HEAT" cable connector to the "HEAT" terminal on the I/O board.

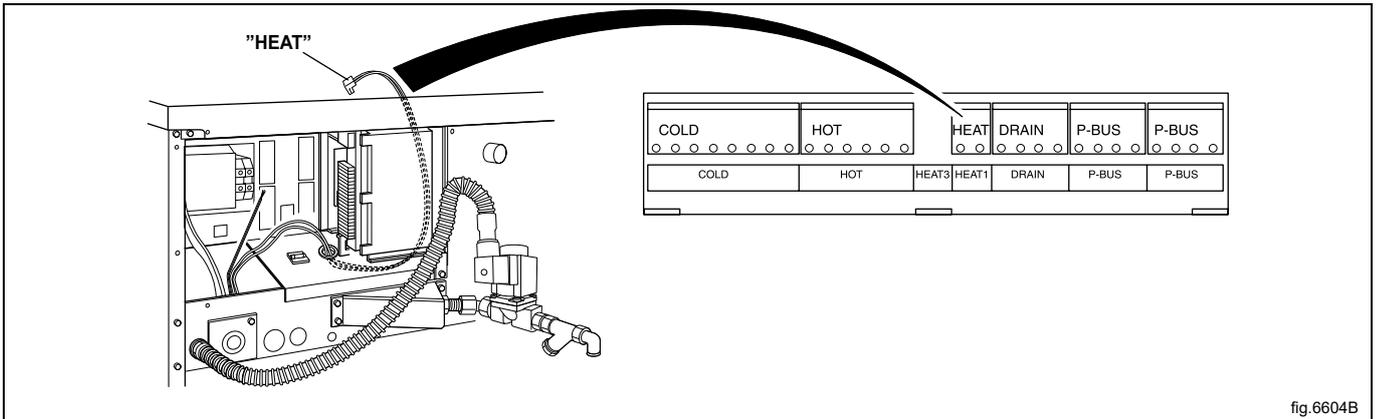


fig.6604B

Steam pressure required:

- minimum: 50 kPa / 7 psi
- maximum: 800 kPa / 115 psi
- recommended: 600 kPa / 87 psi

Note!



A steam heated machine is only intended to use clean steam.

10 Steam connection for dual heating (option for EUD-630, EUD-645, EUD-660, EUD-680)


Inlet pipes connected to the machine must be equipped with a manual shut-off valve to facilitate installation and servicing. The connection hose must be of type ISO/1307- 1983 or equivalent.

Connection size at filter: DN 15 (BSP 1/2").

Demount the top panel (A). Demount the casing (B).

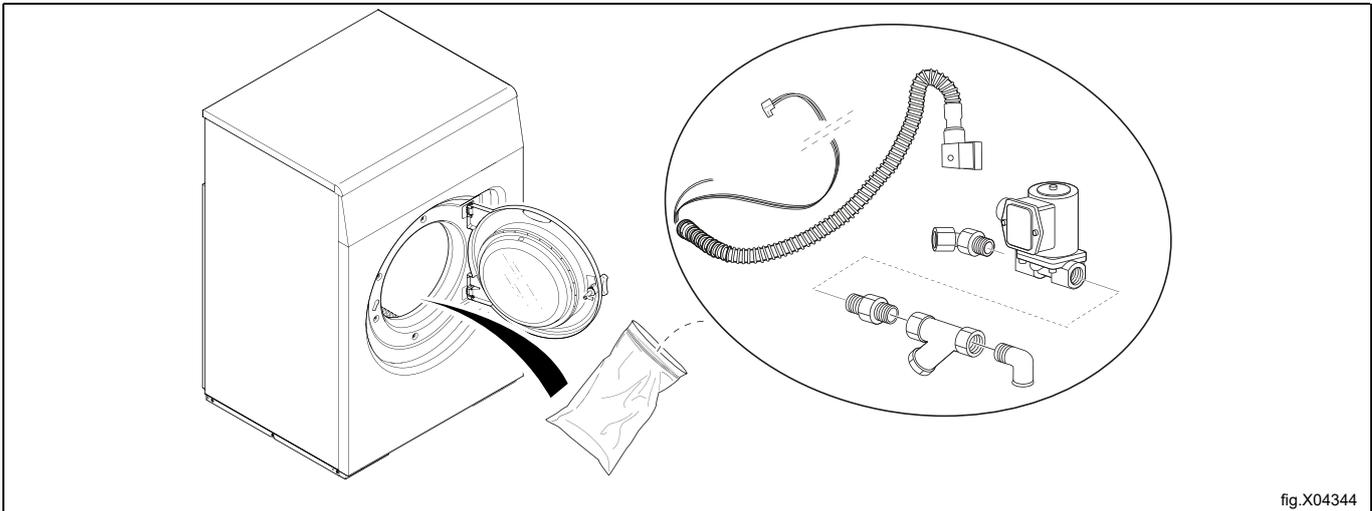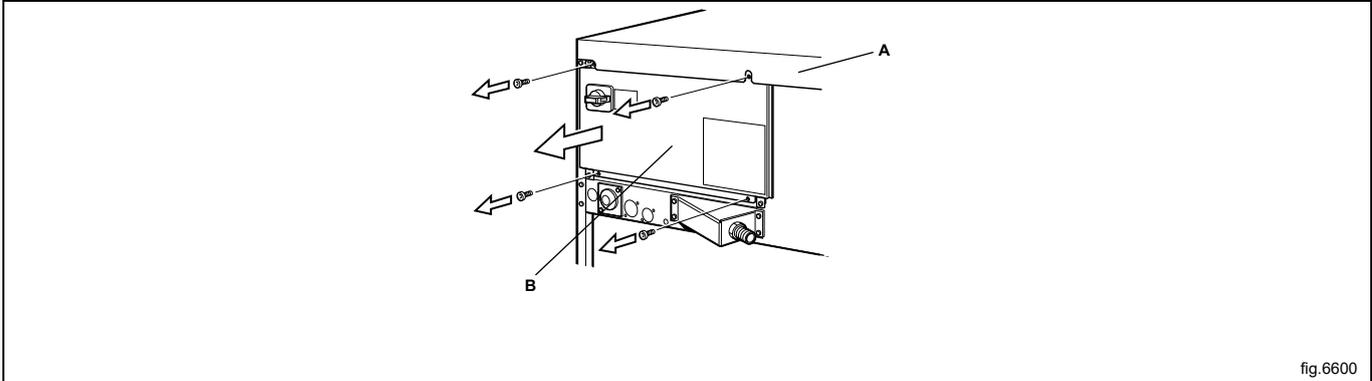


Mount the nipple to the steam valve. Mount the steam valve on the machine. Mount nipple, strainer and elbow. Note the direction of the strainer. Mount steam hose to the elbow. Check that there are no sharp angles or bends on the connected steam hose.

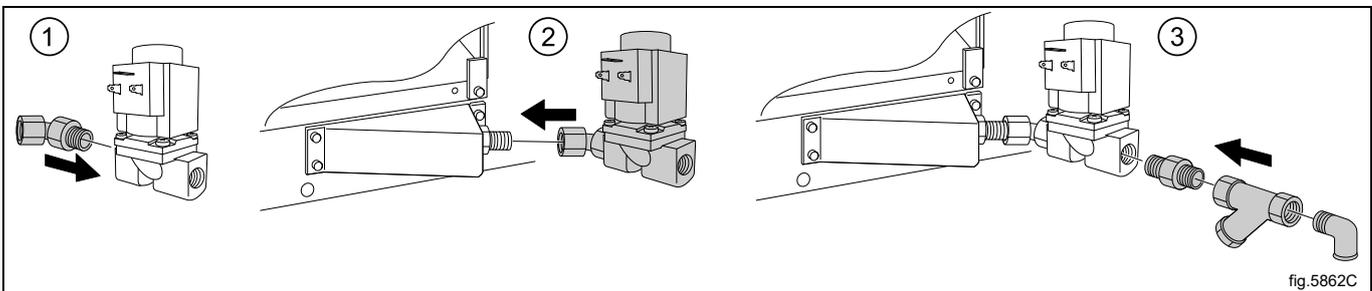


Mount the hose with wires between steam valve and machine. Connect the wires to the steam valve. Connect ground cable to the terminal ground connection.


Cut the wires a few centimeters from the "HEAT-connector".

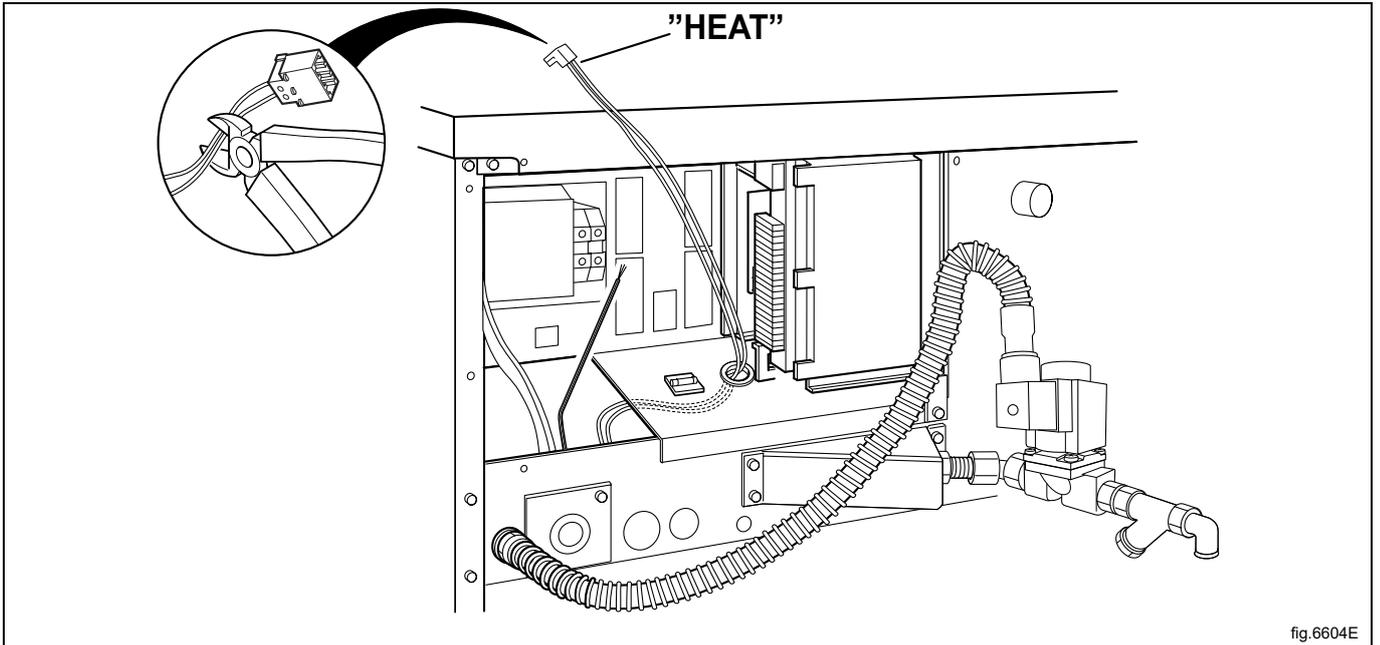

Connect the cut wires to connection 11 and 12 on the I/O board.

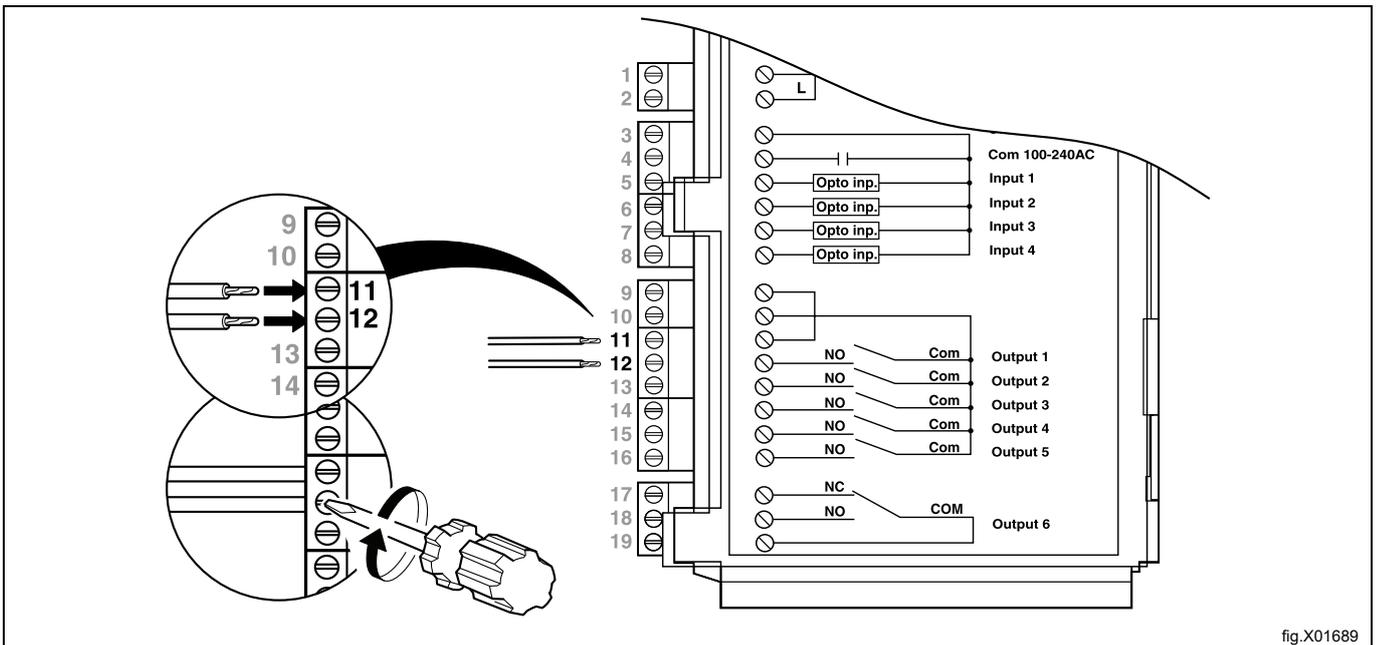

Connect jumpers between connection 1 and 9 and between connection 2 and 10 on the I/O board.

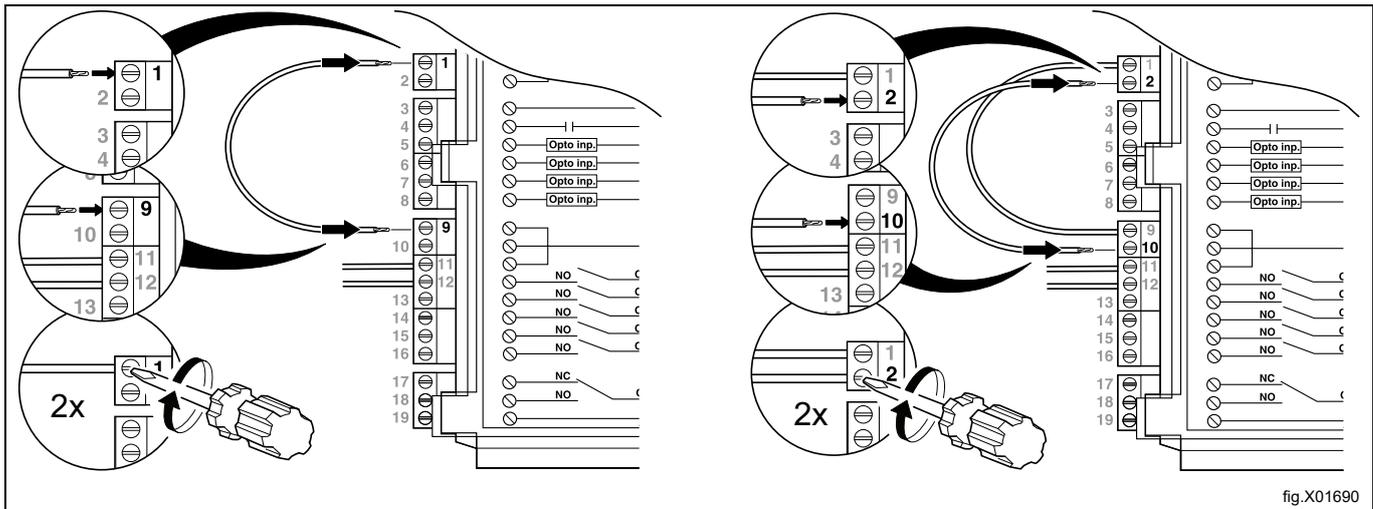

Steam pressure required:

- minimum: 50 kPa / 7 psi
- maximum: 800 kPa / 115 psi
- recommended: 600 kPa / 87 psi

Note!


A steam heated machine is only intended to use clean steam.

11 Machine with level tube and test tap (option for EUD-630, EUD-645, EUD-660, EUD-680)

Machines with this option is built for specific customers who need to see or inspect the water level inside the drum via a glass tube which is mounted on the side of the machine.

A provided test tap is prepared for the tester/inspector and it is possible to collect sample(s) of water from the drum.

- Mount the provided test tap to the left hand side of the machine. When mounting, use thread tape and then close the test tap.

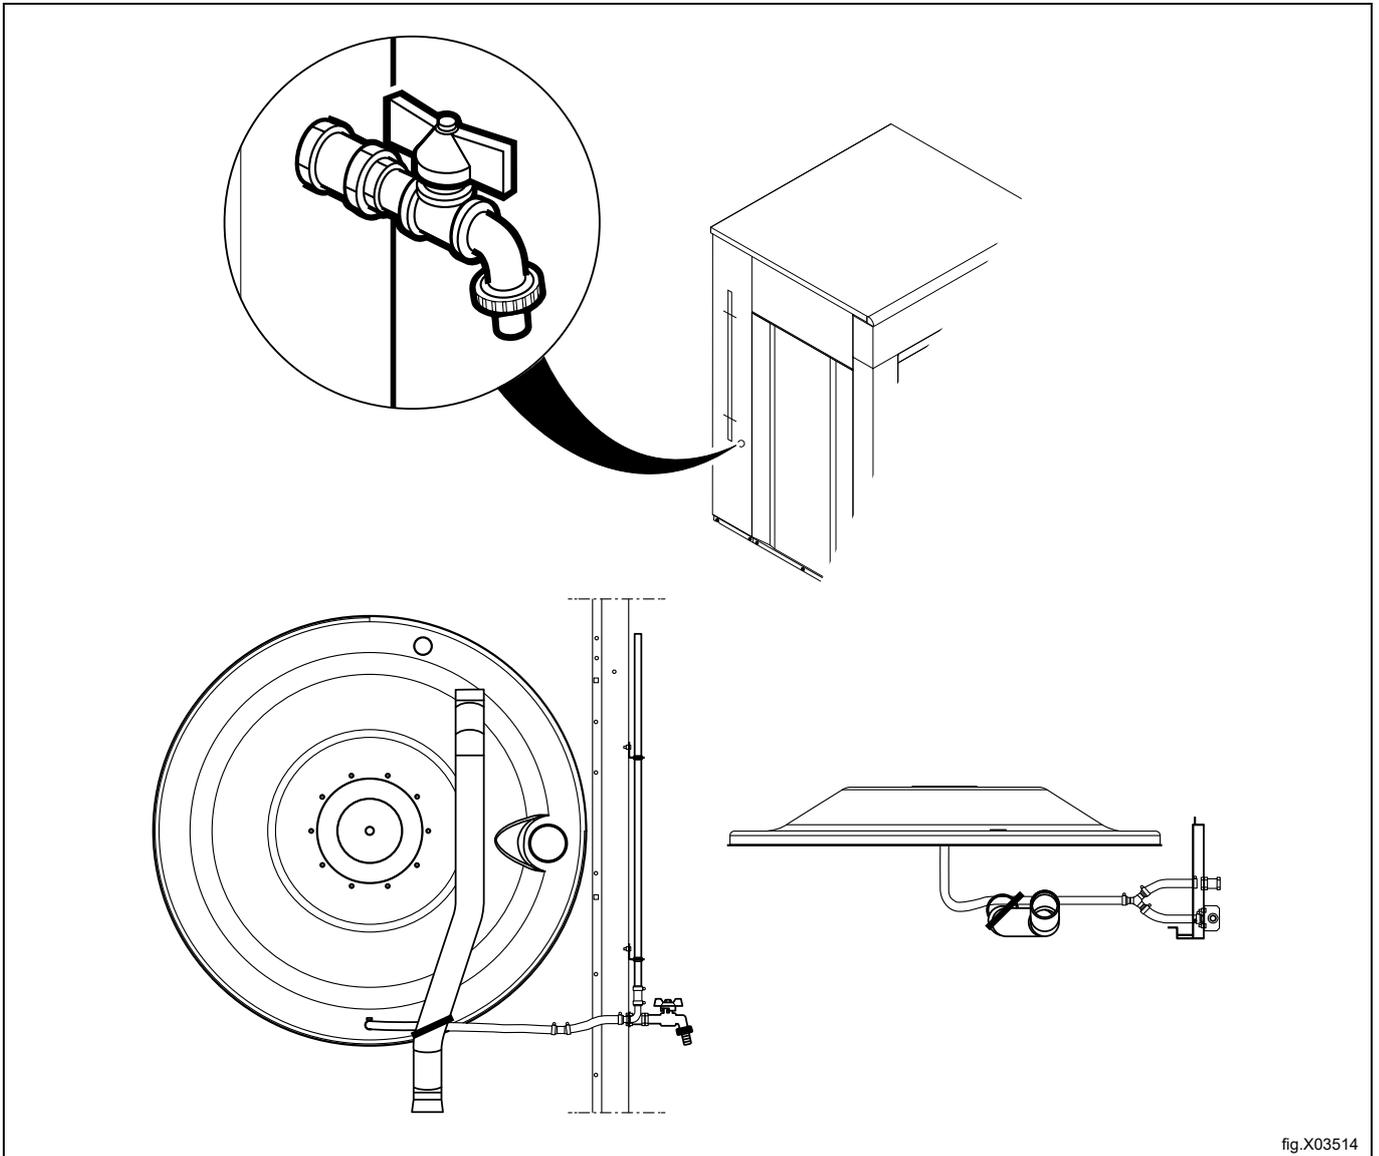

11.1 Setup/Using

Make marks on the level tube to measure for example when a known water volume has been filled-in into the drum. A tip is to mount a scale next to the level tube.

Collect the water samples from the test tap when needed.

12 At first power up

When the installation is complete and the power is connected for the first time you will be forced to make some settings. Follow the instructions on the display. When one setting is ready you will automatically enter the next one.

If installation is made in a public area, it is only allowed to select the below segments:

APARTMENT AUTO DOSING

APARTMENT MANUAL DOSING

APARTMENT BUILDING MATS

LAUNDROMAT/LAUNDERETTE

LAUNDROMAT/LAUNDERETTE WASCOMAT

LAUNDROMAT/LAUNDERETTE MENCH

CAMPING/MARINA

OTHER SELF SERVICE

13 Function check



May only be carried out by qualified personnel.



A function check must be made when the installation is finished and before the machine can be ready to be used.

Open the manual water valves.

Start a program.

- Check that the drum rotates normally and that there are no unusual noises.
- Check that there are no leaks in water supply/drain connections.
- Check that water passes through the detergent container.
- Check that the door cannot be opened during a program.

Ready to use

If all tests are OK the machine is now ready to be used.

If some of the tests failed, or deficiencies or errors are detected, please contact your local service organisation or dealer.

14 Disposal information

14.1 Disposal of appliance at end of life

Before disposing of the machine, make sure to carefully check its physical condition, and in particular any parts of the structure that can give or break during scrapping.

The machine's parts must be disposed of in a differentiated way, according to their different characteristics (e.g. metals, oils, greases, plastic, rubber, etc.).

Different regulations are in force in the various countries, therefore comply with the provisions of the laws and competent bodies in the country where scrapping takes place.

In general, the appliance must be taken to a specialised collection/scrapping centre.

Dismantle the appliance, grouping the components according to their chemical characteristics, remembering that the compressor contains lubricant oil and refrigerant fluid which can be recycled, and that the refrigerator and heat pump components are special waste assimilable with urban waste.



The symbol on the product indicates that this product should not be treated as domestic waste, but must be correctly disposed of in order to prevent any negative consequences for the environment and human health. For further information on the recycling of this product, contact the local dealer or agent, the Customer Care service or the local body responsible for waste disposal.

Note!

When scrapping the machine, any marking, this manual and other documents concerning the appliance must be destroyed.

14.2 Disposal of packing

The packing must be disposed of in compliance with the current regulations in the country where the appliance is used. All the packing materials are environmentally friendly.

They can be safely kept, recycled or burned in an appropriate waste incineration plant. Recyclable plastic parts are marked as following examples.

	Polyethylene: <ul style="list-style-type: none"> • Outer wrapping • Instructions bag
	Polypropylene: <ul style="list-style-type: none"> • Straps
	Polystyrene foam: <ul style="list-style-type: none"> • Corner protectors



www.electroluxprofessional.com